


nedis

HTOI10EWT7 / HTOI10EWT9 / HTOI10EWT11

Oil heater

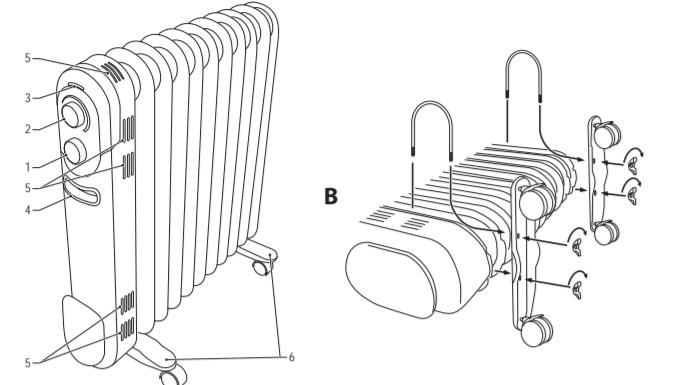

Description (fig. A)

1. On/off button
2. Temperature button
3. Display
4. Handgrip
5. Ventilation openings
6. Support

Safety

- General safety
 - Read the manual carefully before use. Keep the manual for future reference.
 - The device is not liable for consequential damages or for damages to property or persons caused by the use of the device.
 - The device can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.
 - Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
 - Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.
 - The device is suitable for indoor use only. Do not use the device for commercial purposes.
 - Do not use the device in locations with high humidity, such as bathrooms and swimming pools.
 - Do not use the device near bathtubs, showers, basins or other vessels containing water.
 - Do not use a timer or a separate remote-control system that switches on the device automatically.
 - Do not cover the device.
 - Do not block the ventilation openings.
 - Place the device on a stable, flat surface.
 - Place the device at least 1 metre away from the wall.
 - Keep the device away from flammable objects (furniture, curtains, garments, etc.).

Electrical safety

- CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN
 - To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.
 - Disconnect the product from the mains and other equipment if a problem should occur.
 - Do not repair the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
 - Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
 - Do not move the device by pulling the mains cable. Make sure that the mains cable cannot become entangled.
 - Do not immerse the device, the mains cable or the mains plug in water or other liquids.
 - Do not leave the device unattended while the mains plug is connected to the mains supply.
 - Do not use an extension cable.
 - Some parts of this product can become very hot and cause burns. Particular attention has to be given to children and vulnerable people are present.
 - This heater is fitted with a pre-set quantity of special oil. Repairs requiring opening of the oil container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak.
 - When scrapping the heater, follow the regulations concerning the disposal of oil.

Installation (fig. B)

- Refer to the illustration to install the device.

Use

- Initial use**
Note: If you switch on the device for the first time, the device may emit a little smoke and a characteristic smell for a short period. This is normal operation.

Switching on and off

The device can be switched on to three power levels.

Power level	HQ-OR07	HQ-OR09	HQ-OR11
I	600 W	800 W	1000 W
II	900 W	1200 W	1200 W
III	1500 W	2000 W	2200 W

- To switch on the device, turn the on/off button to the "I", "II" or "III" position. The display shows the power level.
- To switch off the device, turn the on/off button to the "0" position. The display goes off.

Setting the temperature

- Turn the temperature button clockwise to increase the temperature.
- Turn the temperature button counterclockwise to decrease the temperature.

Cleaning and maintenance

- Warning!**
 - Before cleaning or maintenance, always switch off the device, remove the mains plug from the wall socket and wait until the device has cooled down.
 - Do not use cleaning solvents or abrasives.
 - Do not clean the inside of the device.
 - Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
 - Do not immerse the device in water or other liquids.
 - Clean the outside of the device using a soft, damp cloth. Thoroughly dry the device with a clean, dry cloth.
 - Clean the ventilation openings using a soft brush.

Beschrijving (fig. A)


1. Hand-knop
2. Temperatuurknop
3. Display
4. Handgreep
5. Ventilatiespieren
6. Steun

Nederlands

- Veiligheid**
 - Lees voor gebruik de handleiding aandachtig door. Bewaar de handleiding voor latere raadpleging.
 - De fabrikant is niet aansprakelijk voor gevolgslade of voor schade aan eigendommen of personen veroorzaakt door het niet naleven van de veiligheidsinstructies en door verkeerd gebruik van het apparaat.
 - Het apparaat kan worden gebruikt door kinderen vanaf 8 jaar en door personen met verminderde lichamelijke, zintuiglijke of geestelijke vermogens of gebrek aan de benodigde ervaring en kennis indien zij dat niet kunnen begrijpen over hoe het apparaat op een veilige manier moet worden gebruikt. Kinderen mogen niet met het apparaat spelen. Reinigen en onderhoud mogen niet worden uitgevoerd door kinderen, tenzij zij onder toezicht staan.
 - Gebruik het apparaat uitsluitend voor de bedoelde doeleinden. Gebruik het apparaat niet voor andere doeleinden dan beschreven in de handleiding.
 - Gebruik het apparaat niet als een onderdeel beschadigd of defect is. Vervang een beschadigd of defect apparaat onmiddellijk.

HTOI10EWT7 / HTOI10EWT9 / HTOI10EWT11

Oil heater

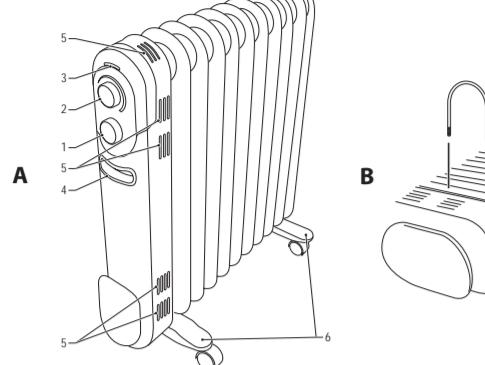

Description (fig. A)

1. On/off button
2. Temperature button
3. Display
4. Handgrip
5. Ventilation openings
6. Support

Safety

- General safety
 - Read the manual carefully before use. Keep the manual for future reference.
 - The device is not liable for consequential damages or for damages to property or persons caused by the use of the device.
 - The device can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.
 - Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
 - Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.
 - The device is suitable for indoor use only. Do not use the device for commercial purposes.
 - Do not use the device in locations with high humidity, such as bathrooms and swimming pools.
 - Do not use the device near bathtubs, showers, basins or other vessels containing water.
 - Do not use a timer or a separate remote-control system that switches on the device automatically.
 - Do not cover the device.
 - Do not block the ventilation openings.
 - Place the device on a stable, flat surface.
 - Place the device at least 1 metre away from the wall.
 - Keep the device away from flammable objects (furniture, curtains, garments, etc.).

Electrical safety

- CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN
 - To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.
 - Disconnect the product from the mains and other equipment if a problem should occur.
 - Do not repair the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
 - Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
 - Do not move the device by pulling the mains cable. Make sure that the mains cable cannot become entangled.
 - Do not immerse the device, the mains cable or the mains plug in water or other liquids.
 - Do not leave the device unattended while the mains plug is connected to the mains supply.
 - Do not use an extension cable.
 - Some parts of this product can become very hot and cause burns. Particular attention has to be given to children and vulnerable people are present.
 - This heater is fitted with a pre-set quantity of special oil. Repairs requiring opening of the oil container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak.
 - When scrapping the heater, follow the regulations concerning the disposal of oil.

Installation (fig. B)

- Refer to the illustration to install the device.

Use

- Initial use**
Note: If you switch on the device for the first time, the device may emit a little smoke and a characteristic smell for a short period. This is normal operation.

Switching on and off

The device can be switched on to three power levels.

Power level	HQ-OR07	HQ-OR09	HQ-OR11
I	600 W	800 W	1000 W
II	900 W	1200 W	1200 W
III	1500 W	2000 W	2200 W

- To switch on the device, turn the on/off button to the "I", "II" or "III" position. The display shows the power level.
- To switch off the device, turn the on/off button to the "0" position. The display goes off.

Setting the temperature

- Turn the temperature button clockwise to increase the temperature.
- Turn the temperature button counterclockwise to decrease the temperature.

Cleaning and maintenance

- Warning!**
 - Before cleaning or maintenance, always switch off the device, remove the mains plug from the wall socket and wait until the device has cooled down.
 - Do not use cleaning solvents or abrasives.
 - Do not clean the inside of the device.
 - Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
 - Do not immerse the device in water or other liquids.
 - Clean the outside of the device using a soft, damp cloth. Thoroughly dry the device with a clean, dry cloth.
 - Clean the ventilation openings using a soft brush.


Beschrijving (fig. A)

1. Hand-knop
2. Temperatuurknop
3. Display
4. Handgreep
5. Ventilatiespieren
6. Steun

Nederlands

HTOI10EWT7 / HTOI10EWT9 / HTOI10EWT11

Oil heater

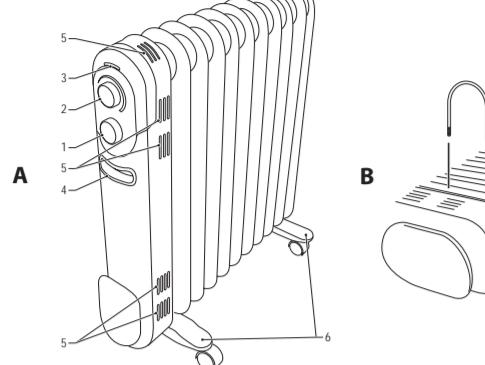

Description (fig. A)

1. On/off button
2. Temperature button
3. Display
4. Handgrip
5. Ventilation openings
6. Support

Safety

- General safety
 - Read the manual carefully before use. Keep the manual for future reference.
 - The device is not liable for consequential damages or for damages to property or persons caused by the use of the device.
 - The device can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.
 - Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
 - Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.
 - The device is suitable for indoor use only. Do not use the device for commercial purposes.
 - Do not use the device in locations with high humidity, such as bathrooms and swimming pools.
 - Do not use the device near bathtubs, showers, basins or other vessels containing water.
 - Do not use a timer or a separate remote-control system that switches on the device automatically.
 - Do not cover the device.
 - Do not block the ventilation openings.
 - Place the device on a stable, flat surface.
 - Place the device at least 1 metre away from the wall.
 - Keep the device away from flammable objects (furniture, curtains, garments, etc.).

Electrical safety

- CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN
 - To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.
 - Disconnect the product from the mains and other equipment if a problem should occur.
 - Do not repair the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
 - Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
 - Do not move the device by pulling the mains cable. Make sure that the mains cable cannot become entangled.
 - Do not immerse the device, the mains cable or the mains plug in water or other liquids.
 - Do not leave the device unattended while the mains plug is connected to the mains supply.
 - Do not use an extension cable.
 - Some parts of this product can become very hot and cause burns. Particular attention has to be given to children and vulnerable people are present.
 - This heater is fitted with a pre-set quantity of special oil. Repairs requiring opening of the oil container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak.
 - When scrapping the heater, follow the regulations concerning the disposal of oil.

Installation (fig. B)

- Refer to the illustration to install the device.

Use

- Initial use**
Note: If you switch on the device for the first time, the device may emit a little smoke and a characteristic smell for a short period. This is normal operation.

Switching on and off

The device can be switched on to three power levels.

Power level	HQ-OR07	HQ-OR09	HQ-OR11
I	600 W	800 W	1000 W
II	900 W	1200 W	1200 W
III	1500 W	2000 W	2200 W

- To switch on the device, turn the on/off button to the "I", "II" or "III" position. The display shows the power level.
- To switch off the device, turn the on/off button to the "0" position. The display goes off.

Setting the temperature

- Turn the temperature button clockwise to increase the temperature.
- Turn the temperature button counterclockwise to decrease the temperature.

Cleaning and maintenance

- Warning!**
 - Before cleaning or maintenance, always switch off the device, remove the mains plug from the wall socket and wait until the device has cooled down.
 - Do not use cleaning solvents or abrasives.
 - Do not clean the inside of the device.
 - Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
 - Do not immerse the device in water or other liquids.
 - Clean the outside of the device using a



Elsäkerhet



- För ett minskas risken för elektriska stötar bör detta produkt endast användas av behörig tekniker när service behövs.
- Dra ut nätkabeln från vägguttaget och koppla till en annan utrustning om något problem skulle uppstå.
- Används inte enheten om nätkabeln eller nätkontakten är skadad eller defekt. Om nätkabeln eller nätkontakten är skadad eller defekt, måste den bytas ut av tillverkaren eller en autoriserad reparatör.
- Kolla alltid om nätnätrommet är den samma som strömspridningen på enheten innan anslutning.
- Förhålla inte till enheten genast att dra i nätkabeln. Härmed kan det förekomma att trassla in sig.
- Doppa inte enheten, nätkontakten eller kontaktkontinuen i vatten eller någon annan vätska.
- Lämna inte enheten övervakas medan nätkontakten är ansluten till vägguttaget.
- Använd ej förlängningskabel.
- VARNING:** Visst delar av enhär produkten kan bli väldigt varma och kan orsaka brännskador. Var särskilt försiktig om barn och äldre personer är varande.
- Denna typ av element är fyllt med en exakt mångd specialolja. Reparationer som kräver öppning av oljekällanternor kan endast göras av tillverkaren eller dennes serviceombud som ska kontakta om det finns ett oljeläckage.
- Vid skrotning av elementet, följ föreskrifterna angående kassering av olja.

Installation (fg. B)

Se illustrationen för installation av enheten.

Användning**Första användning**

Öns: Om du sätter på enheten första gången, kan enheten ge ifrån sig lite rök och en karakteristisk lukt under den första perioden. Detta är normalt.

Slä på och av

Enheten kan sättas på med tre effektnivåer.

Effektnivå	HQ-OR07	HQ-OR09	HQ-OR11
I	600 W	800 W	1000 W
II	900 W	1200 W	1200 W
III	1500 W	2000 W	2200 W

- För att sätta på enheten, vrid av/på-knappen till ett av lägena "I", "II" eller "III". Displayen visar effektnivån.
- För att slänga av enheten, vrid av/på-knappen till "0"-läget. Displayen släcks.

Inställning av temperaturer

Vrid temperaturknappen medurs för öka temperaturen.

Vrid temperaturknappen moturs för att minska temperaturen.

Rengöring och underhåll

Warning! Innan rengöring eller underhåll, se till att du har stängt av enheten, tagit ur nätkontakten ur vägguttaget och vänta till enheten har kylts av.

Använd inga rengöringsmedel som innehåller lösningsmedel eller slipmedel.

Rengör inte enheten insidan.

Förslag att rengöra enheten. Bety ut enheten mot en ny om den inte fungerar som den ska.

Doppa inte enheten i vatten eller andra vätskor.

Rengör enheten utsida med en mjuk fuktad trasa. Torka noggrant enheten med en ren, torr trasa.

Rengör ventilationshöppningarna med en fin borste.

Kuvaus (kuva A)

- Virtapainikke
- Lämpötilapainike
- Näyttö
- Kahvi
- Tuuletusaukot
- Tuki

Turvallisuus

Yleinen turvallisuus

Lue käytöissä olevia ennen käyttöä. Säilytä käytössä tulevaa käyttöä varten.

Valmistaja ei ole vastuussa henkilöille tai omaisuudeille haitavaloista, jos ne johtuvat turvallisuusohjeiden laiminlyönnistä tai laitteineen sopimattomasta käytöstä.

Tätä laitetta voivat käyttää vähintään 8-vuotiaat lapset ja henkilöt, joilla on fyysisi, aisti- ja mentalisia rajoitteita tai joilla ei ole kompetenssi tai tieto laitteesta, jos he ovat valvonnassa tai joillakin turvallisuudenstaaden vastava henkilö on opastunut heitä laitteeseen käytössä ja he myö häntävät käytön ittyväy vaarat. Lasten ei saa käytellä laitetta.

Rengör laitteen ulkopuolella, eikä se voi tuhota laitetta ilman valvontaa.

Rengör enheten utsida med en mjuk fuktad trasa. Torka noggrant enheten med en ren, torr trasa.

Rengör ventilationshöppningarna med en fin borste.

Rengör tuuletusaukot.

Rengör tuuletusaukot.