

ASSEMBLY VERO TENT

PREMIUM



1. Take off the cover



2. Pull apart the frame

Take the V, formed by the frame, with both hands and press upwards. With square tents take the narrow sides.



3. Move out the legs

Take the opposite pairs. All snaps must be engaged on all legs top and bottom.



4. Tighten the roof inside

Pull the velcro through the hole or around the connectors to properly tighten the roof fabric



5. Fix the legs

choose fitting weights and/or anchoring, use the safety straps to tie down the tent



Hints for the first assembly

put the roof on the half raised frame
fix the roof on the gable
fix the fabric on the legs



AUFBAU **VERO**TENT

PREMIUM



1. Tasche abnehmen



2. Gestell auseinander ziehen

Mit beiden Händen am V
der Scherenverbindung nach
oben drücken, bei rechteckigen
Zelten an den Schmalseiten nehmen



3. Beine paarweise ausziehen

Gleiter müssen an allen
Standbeinen oben und unten
einrasten



4. Dach innen abspannen

Klettverschluss durch die Lasche
bzw unter den Scheren durch, nach
oben gut spannen



5. Standbeine fixieren

je nach Standort passende
Beschwerung/Verankerung wählen
Abspannschnüre verwenden



Hinweise für den 1. Aufbau

Dach am Einfachsten am
halb aufgezogenen Gestell montieren
Dach an der Giebelstange fixieren
Plane an den Standbeinen fixieren

