


H454/03020-

Yale

Electric Chain Hoist

Series CPE

Capacity 1600 kg - 5000 kg

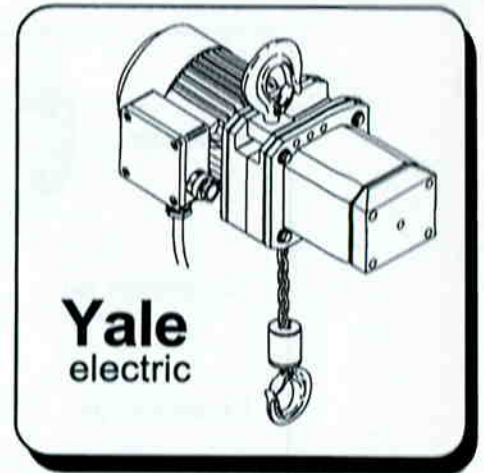

Operating and Maintenance Manual

Spare Parts Catalog

Yale

Yale Industrial Products GmbH

P. O. Box 10 13 24 • D-42513 Velbert, Germany
Am Lindenkamp 31 • D-42549 Velbert, Germany
Tel. 2051-600-0 • Fax 2051-600-127

Ident.-No. 09900069 / 01.00



Yale Electric Chain Hoist CPE

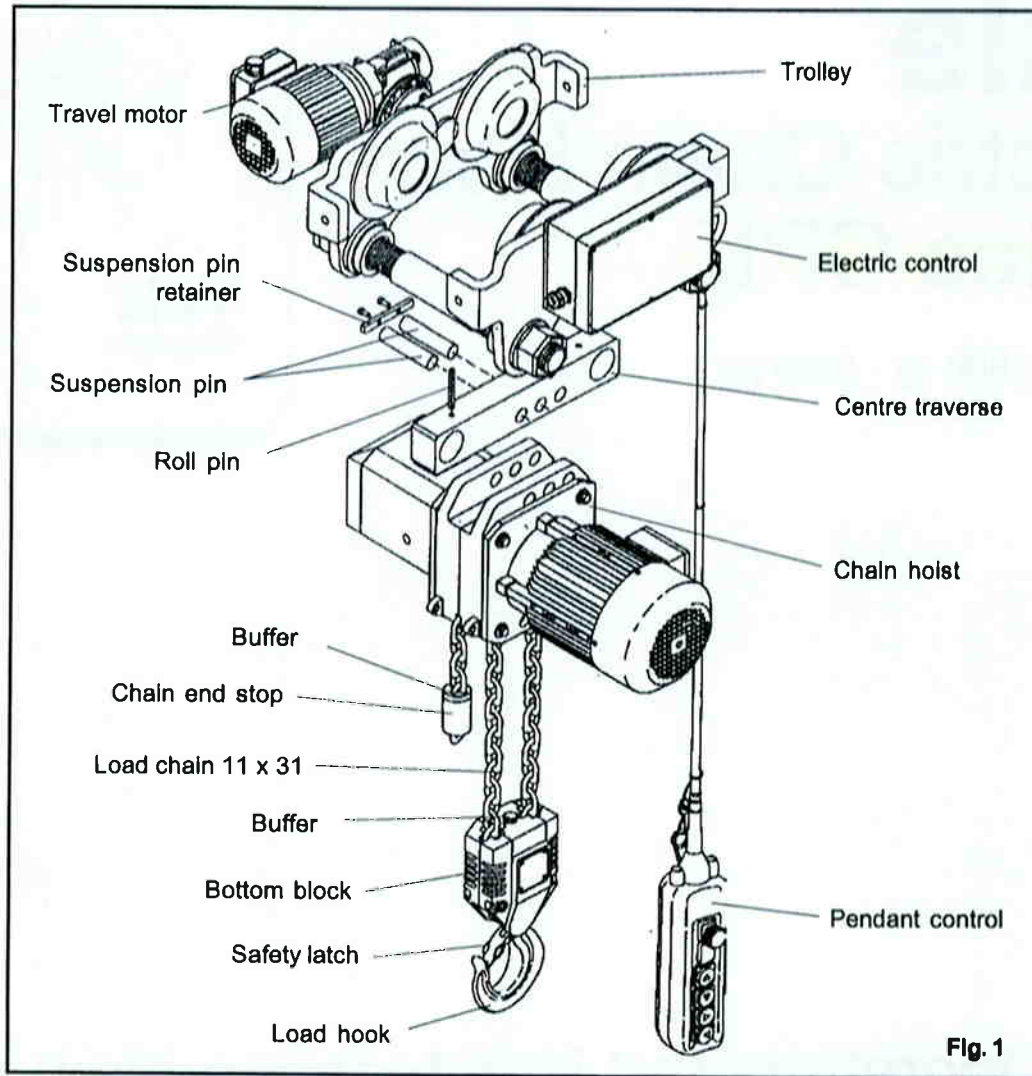


Fig. 1

| Technical data electric chain hoist | | | | | | | Technical data electric trolley | | | | |
|-------------------------------------|---------------|-----------------------|---------------------|-------------------|--------------------------|-----------|---------------------------------|-------------------|-------------------------|--------------------|-------------------|
| Model | Capacity [kg] | Number of chain falls | Motor rating ED [%] | Motor [kW] | Lifting speed(s) [m/min] | FEM group | Beam widths [mm] | Mln. curve radius | Travel speed(s) [m/min] | Motor [kW] | Motor rating ED % |
| CPE 16-8 CPEF 16-8 | 1600 | 1 | 40 40 / 20 | 2,3 2,3 / 0,52 | 8 8 / 2 | 1 Am | 98 -180 or 180 - 300 | 1800 | 11 11 / 2,8 | 0,37 0,3 / 0,09 | 40 40 / 20 |
| CPE 20-8 CPEF 20-8 | 2000 | 1 | 25 25 / 15 | 2,8 2,8 / 0,7 | 8 8 / 2 | 1 Bm | 98 -180 or 180 - 300 | 1800 | 11 11 / 2,8 | 0,37 0,3 / 0,09 | 40 40 / 20 |
| CPE 25-5 CPEF 25-5 | 2500 | 1 | 40 40 / 20 | 2,3 2,3 / 0,52 | 5 5 / 1,25 | 1 Am | 98 -180 or 180 - 300 | 1800 | 11 11 / 2,8 | 0,37 0,3 / 0,09 | 40 40 / 20 |
| CPE 30-5 CPEF 30-5 | 3000 | 1 | 25 25 / 15 | 2,8 2,8 / 0,7 | 5 5 / 1,25 | 1 Bm | 98 -180 or 180 - 300 | 1800 | 11 11 / 2,8 | 0,37 0,3 / 0,09 | 40 40 / 20 |
| CPE 32-4 CPEF 32-4 | 3200 | 2 | 40 40 / 20 | 2,3 2,3 / 0,52 | 4 4 / 1 | 1 Am | 98 -180 or 180 - 300 | 1800 | 11 11 / 2,8 | 0,37 0,3 / 0,09 | 40 40 / 20 |
| CPE 40-4 CPEF 40-4 | 4000 | 2 | 25 25 / 15 | 2,8 2,8 / 0,7 | 4 4 / 1 | 1 Bm | 98 -180 or 180 - 300 | 1800 | 11 11 / 2,8 | 0,37 0,3 / 0,09 | 40 40 / 20 |
| CPE 50-2 CPEF 50-2 | 5000 | 2 | 40 40 / 20 | 2,3 2,3 / 0,52 | 2,5 2,5 / 0,6 | 1 Am | 98 -180 or 180 - 300 | 1800 | 11 11 / 2,8 | 0,37 0,3 / 0,09 | 40 40 / 20 |



TABLE OF CONTENTS

| | PAGE |
|---|-----------|
| 1. GENERAL INFORMATION | 3 |
| 2. OPERATING INSTRUCTIONS | 3 |
| 2.1 Correct operation | 3 |
| Maximum capacity | 3 |
| Danger zones | 3 |
| Attaching the hoist / trolley | 3 |
| Temperature range | 4 |
| Regulations | 4 |
| Maintenance / repair | 4 |
| 2.2 Incorrect operation | 4 |
| 2.3 Initial operation | 4 |
| Inspection before initial operation | 4 |
| Inspection before starting work | 4 |
| Inspection of load chain | 4 |
| Inspection of chain end stop | 4 |
| Inspection of chain reeving | 4 |
| Inspection of suspension and load hooks | 5 |
| Attaching the load | 5 |
| Inspect the traverse (for trolleys) | 5 |
| Check adjustment of trolley width | 5 |
| 3. ASSEMBLY | 5 |
| 3.1 Inspection before assembly | 5 |
| 3.2 Electric chain hoist with hook suspension (Standard version) | 5 |
| 3.3 Electric chain hoist with trolley | 5 |
| Assembly of the trolley | 6 |
| 2.4 Electrical connection | 6 |
| Preparation | 6 |
| Mains supply connection | 6 |
| 4. FUNCTIONAL TEST AFTER ASSEMBLY | 6 |
| 5. OPERATION | 7 |
| Installation, service, operation | 7 |
| Traversing the trolley | 7 |
| Attaching the load | 7 |
| Lifting / lowering the load | 7 |
| Emergency stop | 7 |
| 6. SERVICE | 8 |
| 6.1 Daily checks | 8 |
| 6.2 Regular inspections, service and testing | 8 |
| 6.3 Load chain | 9 |
| Lubricating the load chain | 9 |
| Inspecting the load chain for wear | 9 |
| Replace the load chain | 9 |
| 1-strand design | 9 |
| 2-strand design | 9 |
| 6.4 Load and suspension hooks | 10 |
| 6.5 Trolleys | 10 |
| 6.6 Electric chain hoist in general | 10 |
| 6.7 Overload protection device | 10 |
| 6.8 Gearbox | 10 |
| Check oil level | 10 |
| Oil change | 10 |
| Disassembly and reassembly | 11 |
| 6.9 Maintenance of the motor | 11 |
| Motor | 11 |
| Disc brake | 11 |

1. GENERAL INFORMATION

Attention: All users must read these operating instructions carefully prior to the initial operation. These instructions are intended to acquaint the user with the hoist / trolley and enable him to use it to the full extent of its intended capabilities.

The operating instructions contain important information on how to handle the hoist / trolley in a safe, correct and economic way. Acting in accordance with these instructions helps to avoid dangers, reduce repair costs and downtime and to increase the reliability and lifetime of the hoist / trolley.

Anyone involved in doing any of the following work with the hoist / trolley must read the operating instructions and act accordingly:

- operation, including preparation, trouble shooting and cleaning
- maintenance, inspection, repair
- transport

Apart from the operating instructions and the accident prevention act valid for the respective country and area where the hoist / trolley is used, also the commonly accepted regulations for safe and professional work must be adhered to.

Every unit leaving the factory is furnished with a test certificate that shows the serial number of the hoist / trolley. This certificate has to be filed together with the inspection manual (see page 30).

The continuous sound level at the place of work is equal to 73 dB. The measurements were taken at a distance of 1 m from the hoist at 9 positions in accordance with DIN 45635, precision class 2.

2. OPERATING INSTRUCTIONS


2.1 Correct operation

Maximum capacity

- The Yale electric chain hoist model CPE is designed to lift and lower loads up to the rated capacity. The lifting capacity indicated on the hoist / trolley is the maximum safe working load which must not be exceeded.

Danger zones

- Do not lift or transport loads while personnel are in the danger zone.
- Do not allow personnel to pass under a suspended load (see Fig. 2)
- After lifting or tensioning, a load must not be left unattended for a longer period of time.
- Start moving the load only after it has been attached correctly and all personnel are clear of the danger zone.

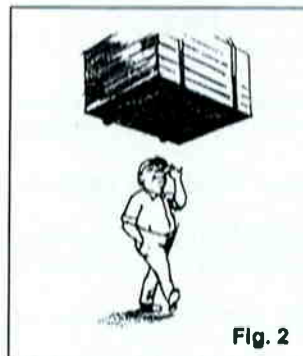

Attaching the hoist / trolley

- The operator must ensure that the hoist / trolley is attached in a manner that does not expose himself or other personnel to danger by the hoist, trolley, chain(s) or the load.



Yale Electric Chain Hoist CPE

Temperature range

The hoist / trolley can be operated in ambient temperatures between -10°C and $+50^{\circ}\text{C}$. Consult the manufacturer in case of extreme working conditions.

Note: At ambient temperatures below 0°C check the brake is not frozen.

Regulations

The accident prevention act and/or safety regulations of the respective country for using manual and electric hoists must be strictly adhered to. In Germany these are VBG 8, VBG 9, VBG 9a, ZH 1/25, ZH 1/27, and VDE 0100 resp. VDE 0130.


Maintenance / Repair

In order to ensure correct operation, not only the operating instructions, but also the conditions for inspection and maintenance must be complied with. If defects are found stop using the hoist / trolley immediately.


Attention: Before starting work on electrical components switch OFF the main current switch and secure it against unintentionally being switched back on.

2.2 Incorrect operation

- Do not exceed the rated capacity of the hoist / trolley.
- Do not use the hoist / trolley for the transportation of people (Fig. 3)
- Welding on hook and load chain is strictly forbidden. The load chain must never be used as a ground connection during welding (Fig. 4).

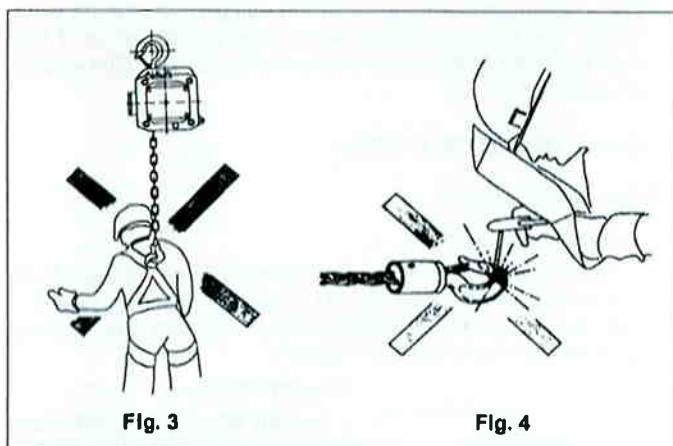

- Avoid side pull, i.e. side load on either housing or bottom block (Fig. 5). Lift only when the load chain forms a straight line between both hooks.
- The load chain must not be used for lashing purposes (sling chain) (Fig. 6).
- Do not knot or shorten the load chain by using bolts, screws, screwdrivers or other devices (Fig. 7). Do not repair chains installed in the hoist.
- Do not remove the safety latch from the suspension or load hooks (Fig. 8).
- Do not use the chain end stop as an operational limit device (see Fig. 1 - chain end stop).
- Do not throw the hoist hoist or trolley down. Always place it properly on the ground.

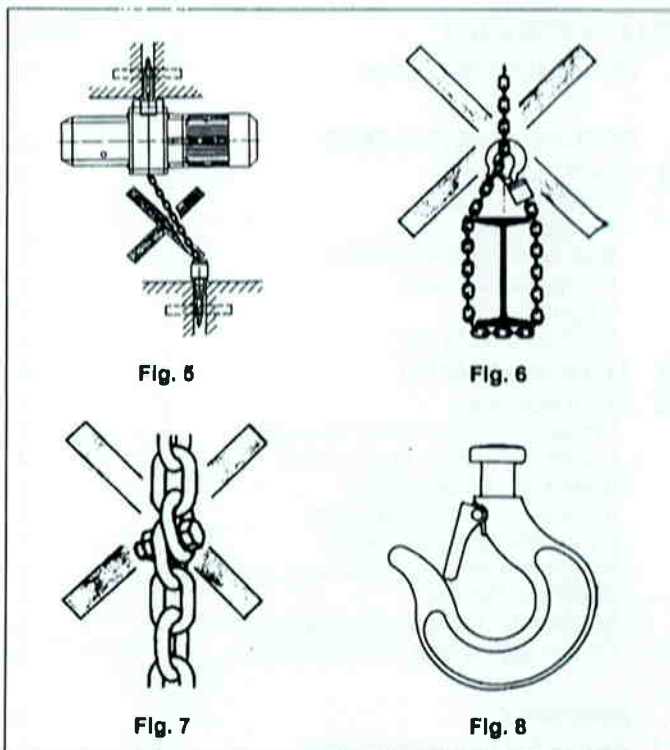

2.3 Initial operation

Inspection before initial operation

Each hoist / trolley must be inspected prior to initial operation by a competent person and any failures be removed. The inspection is visual and functional and shall establish that the hoist is safe and has not been damaged by incorrect transport or storage. Inspections should be made by a representative of the manufacturer or the supplier although the company can assign its own suitably trained personnel. Inspections are instigated by the user.

Inspection before starting work

Before starting work inspect the hoist / trolley, chains and all load bearing components every time for visual defects. Furthermore test the brake and make sure that the load and hoist / trolley are correctly attached by carrying out a short work cycle of lifting and lowering resp. travelling in both directions. Selection and calculation of the proper suspension point and beam construction are the responsibility of the user.

Inspection of load chain

Inspect the chain for sufficient lubrication any visually check for external defects, deformations, superficial cracks, wear or signs of corrosion.

Inspection of chain end stop

The chain end stop must be connected to the free (idle) chain strand (see Fig. 1 - chain end stop).

Inspection of chain reeving

All units with two or more chain strands should be inspected prior to initial operation for twisted or kinked chains. The chains of 2-strand hoists may be twisted if the bottom block was rolled over (Fig. 9).


Inspection of suspension and load hooks

Inspect suspension and load hooks for deformations, damage, cracks, wear or signs of corrosion.



Attaching the load

The load must always be seated in the saddle of the hook. Never attach the load to the tip of the load hook. This also applies to the suspension hook (Fig. 10).

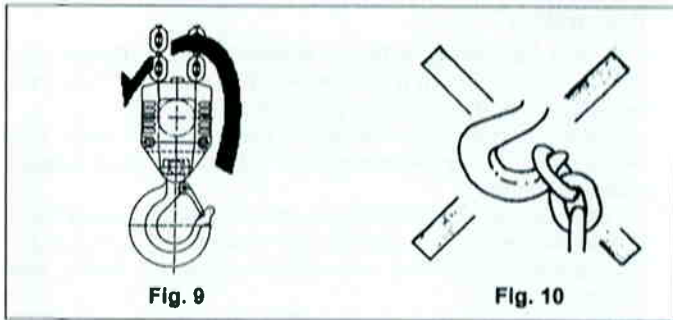

Inspect the traverse (for trolleys)

Inspect the traverse for correct assembly and visually check for external defects, deformations, superficial cracks, wear or signs of corrosion. Especially make sure that the roll pins are properly fitted to the centre traverse (Fig. 12).

Check adjustment of trolley width

On chain hoists without suspension hook (CPE-VTP/G/E) check that the clearance between the trolley wheel flange and the beam outer edge is equal on both sides and within the tolerances given (see page 6, 2.) - 3.). Enlarging the clearances, e.g. to enable the trolley to negotiate tighter curves, is forbidden.

3. ASSEMBLY

3.1 Inspection before assembly



- Check for transport damage
- Check for completeness
- Check that the capacity indication on hoist and bottom block match.

3.2 Electric chain hoist with hook suspension (Standard version)


The suspension hook is connected to the hoist with two suspension pins. Independent of how the hoist is reeved the load hook must always hang vertically under the suspension hook. In 1-strand configuration the suspension hook is to be installed centred on the marking "1/1", in 2-strand configuration centred on the marking "2/1" (see Fig. 11).

Attention: Secure the two suspension pins with locking plate after assembly.

Selection and calculation of the suitable suspension point and beam construction are the responsibility of the user.

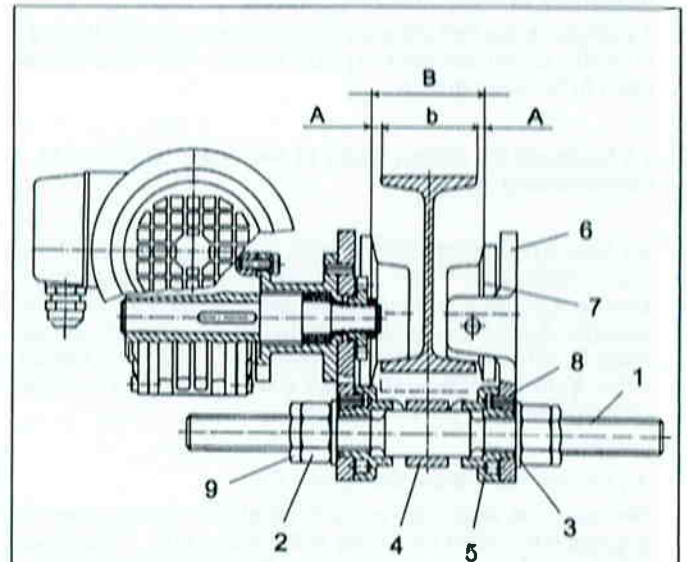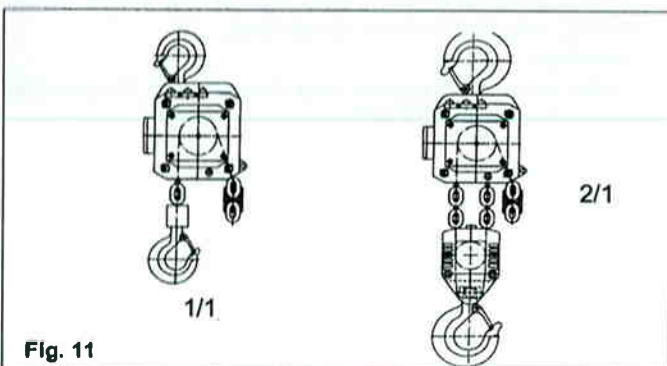

| No. | Description | No. | Description |
|-----|-----------------|-----|---------------|
| 1 | Crossbar | 6 | Side plate |
| 2 | Hex. nut | 7 | Trolley wheel |
| 3 | Washer | 8 | Roll pin |
| 4 | Centre traverse | 9 | Locknut |
| 5 | Round nut | | |

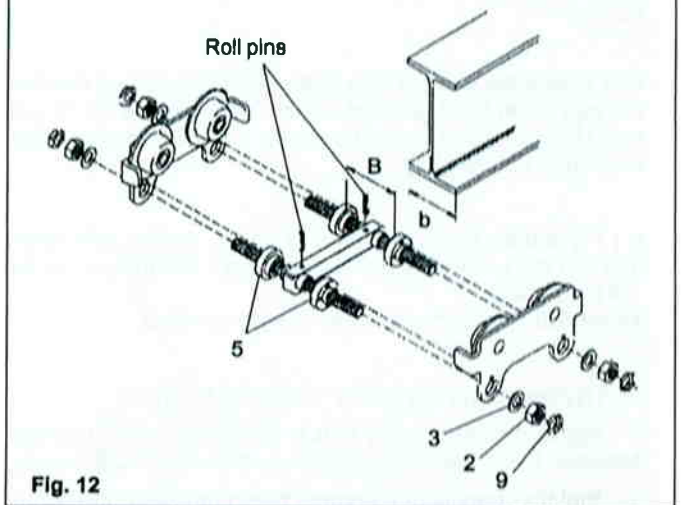

3.3 Electric chain hoist with trolley

The trolleys are supplied pre-assembled for beam width A or B (see table below). This is indicated on the nameplate. Before installation ensure that the trolley width is correct for the intended carrying beam.

| Beam range | Flange width m m | | Flange thickness m m max |
|------------|------------------|-----|--------------------------|
| | min | max | |
| A | 98 | 180 | 27 |
| B | 180 | 300 | 27 |



Yale Electric Chain Hoist CPE

Assembly of the trolley (see Fig. 12)

1.) Unscrew the locking nuts (Item 9) and hex. nuts (Item 2) from the crossbars (Item 1) and remove both side plates (Item 6) from the trolley.

2.) Measure the flange width of the beam (see Fig. 11 - measurement "b").

3.) Adjust measurement "B" between the shoulders of the round nuts (Item 5) on the threaded crossbars (Item 1). Ensure that the 4 bores in the round nuts face towards the outside. Adjust the measurement "B" to equal measurement "b" plus 4 mm. Measurement "A" must be 2 mm on either side and the suspension traverse (Item 4) must be centred between the round nuts.

4.) Replace one side plate (Item 6):

Replace one side plate ensuring that the roll pins (Item 8) engage into one of the bores in the round nuts. To achieve this it may be necessary to rotate the round nuts slightly.

5.) Replace the washers (Item 3) and tighten the hex. nuts (Item 2). Screw on the locknuts (Item 9) fingertight and tighten a further 1/4 to 1/2 turn.

Attention: The locknuts must always be fitted.

6.) Loosely replace the second side plate (Item 6) on the crossbars (Item 1). The washers (Item 3), hex. nuts (Item 2) and locknuts (Item 9) can be fitted loosely.

7.) Raise the complete pre-assembled trolley to the carrying beam.

8.) Engage the second side plate (Item 6) ensuring that the roll pins (Item 8) engage into one of the bores in the round nuts (Item 5). To achieve this it may be necessary to rotate the round nuts slightly.

9.) Tighten the hex. nuts (Item 2) on the second side plate. Tighten the locknuts (Item 9) fingertight and then a further 1/4 to 1/2 turn.

Attention: The locknuts must always be fitted.

10.) By traversing the trolley check the following:

- that a clearance of 2 mm is maintained on each side between the trolley wheel flanges and the beam outer edge.
- that the suspension traverse is centred below the beam.
- that all 4 locknuts (Item 9) are fitted.

11.) Model CPE-VTG only:

To fit the hand chain position the slot on the outer edge of the hand chain wheel below the chain guide. Place any one link of the endless hand chain vertically into the slot and turn the hand chain wheel until the link has passed the chain guides on both sides.

Attention: Do not twist the hand chain when fitting.

Geared trolleys are moved by pulling the hand chain.

2.4 Electrical connection

Attention

Work at electrical installations may be carried out by electrical experts only. The local regulations have to be strictly observed, in Germany DIN 7100 / VDE 0100 and DIN 57113 / VDE 0113.

Preparation

- Before beginning work on electrical components the mains current switch must be switched OFF and secured against unintentionally being switched back on.
- Before connecting the chain hoist ensure that the electrical data on the nameplate match the local supply specifications.
- The mains supply cable must be an insulated cable with 4 flexible leads. The ground (earth) lead must be longer than the live leads. For wire cross-section and fusing see table on page 7.
- The length of the pendant control cable is determined by working conditions. Attach the tension relief wire in a manner that the pendant control cable hangs load-free.
- Wiring and terminal connecting diagrams are included with the hoist.

Mains supply connection

1.) The mains supply cable must be connected to the electric chain hoist before it is connected to the mains supply.

2.) On chain hoists with an electric trolley (CPE-VTE) the three phases of the mains supply are to be connected to the terminal strip within the terminal box on the trolley. The ground/earth wire is to be connected to the special ground/earth connection within the terminal box of the chain hoist.

3.) On chain hoists without electric trolley the mains supply and the ground/earth wire are to be connected to the terminal strip within the terminal box of the chain hoist.

4.) After removing the terminal box cover, connect the wiring as shown on the wiring diagram label inside the terminal box cover.

Attention: On hoists with direct control the ground/earth wire should always be connected according to the wiring diagram. Should the mains supply source not provide a ground (earth) connection please consult the manufacturer.

5.) After replacing the terminal box cover, connect the other end of the supply cable to the mains supply.

6.) Check the motor's direction of rotation.

The wiring diagram included has been drawn for a normal, clockwise rotating installation. Should the user's mains supply not fulfil these requirements, e.g. the hoist lowers when lift is selected (or vice versa) switch the unit OFF immediately and exchange two of the three phase connections in the mains connection.

Attention:

Under no circumstances may the wiring in the pendant control be tampered with.

Yale Electric Chain Hoist CPE



| Model | P _n [kW] | ED [%] | I _l /I _n | I _n [A] | Fuse (slow) [A] | Wire cross section in mm ² for cable length | | |
|--------------------------------------|------------------------|-----------|--------------------------------|-----------------------|-----------------------|---|----------|-----------|
| | | | | | | 0-50 m | 50-100 m | 100-150 m |
| CPE 16 CPE 25 CPE 32 CPE 50 | 2,3 | 40 | 4,7 | 5,3 | 16* | 1,5 | 1,5 | 2,5 |
| CPE 20 CPE 30 CPE 40 | 2,8 | 25 | 4,7 | 6,4 | 16* | 2,5 | 2,5 | - |

| Model | P _n [kW] | ED [%] | I _l /I _n | I _n [A] | Fuse (slow) [A] | Wire cross section in mm ² for cable length | | |
|--|------------------------|-----------|--------------------------------|-----------------------|-----------------------|---|----------|-----------|
| | | | | | | 0-50 m | 50-100 m | 100-150 m |
| CPEF 16 CPEF 25 CPEF 32 CPEF 50 | 0,58/2,3 | 20/40 | 1,8/4,4 | 3,3/5,5 | 16* | 1,5 | 2,5 | 2,5 |
| CPE 20 CPE 30 CPE 40 | 0,7/2,8 | 15/25 | 1,8/4,4 | 4,0/6,8 | 16* | 2,5 | 2,5 | - |

all data for 400V, 3 Phase, 50 Hz

* for direct control (for low voltage contactor control = 10A)

4. FUNCTIONAL CHECK AFTER ASSEMBLY

Prior to operating the hoist, grease the trolley pinions (manual geared and electric trolleys) and lubricate the load chain when it is not under load (see page 8).

Before the hoist is put into regular service, following additional inspections must be made:

- Are all screwed connections on hoist and trolley tight and are all locking devices in place and secure?
- Are the end stops on the trolley runway in place and secure?
- Is the chain drive correctly reeved?
- Is the chain end stop correctly fitted to the loose end of the load chain?
- All units equipped with two or more chain strands should be inspected before initial operation for twisted or kinked chains. The chains of 2-strand hoists may be twisted if the bottom block is rolled over.
- Perform an operation cycle without load. The chain should move in a steady, smooth way. Check the function of the overload device by raising the bottom block against the hoist body (max. 5 sec.).
- Check the brake function when lifting and lowering. The braking distance must not be more than 50 mm.
- Traverse the trolley (if available) the complete length of the trolley runway ensuring that the 2 - 4 mm lateral clearance between the trolley wheel flange and the beam outer edge is maintained at all times. Check that beam end stops are positioned correctly and secure.

5. OPERATION

In addition to the recommendation in section 1, following rules must be strictly maintained to ensure the safe operation of the hoist:

Installation, service, operation

Users delegated to install, service or independently operate the hoist must have had suitable training and be competent.

Users are to be specifically nominated by the company and must be familiar with all relevant safety regulations.

Traversing the trolley

Plain trolleys: Pull on the load chain of the hoist.

Attention: Never pull on the pendant control cable.

Geared trolleys: By operating the trolley hand chain.

Electric trolleys: By operating the ⇌ resp. ⇐-button.

For trolleys with two speeds: The first stage of button depression activates the slow speed, further depression activates the fast speed. Use the slow speed for short periods only.

Consider the braking distance of the trolley. Do not use the beam end stops as operational limit devices

Attaching the load

Attach the load to the hoist using only approved and certified slings or lashing devices. Never use the load chain as sling chain. The load must always be seated in the saddle of the hook. Never attach the load to the tip of the hook. Never remove the safety latch from suspension or load hooks.

Lifting / lowering the load

The load is lifted by depressing the ↑-button, it is lowered by depressing the ↓-button. For hoists with two speeds: The first stage of button depression activates the slow speed, further depression activates the faster speed. Use the slow speed for short periods only. Do not use the chain end stop as operational limit device.

Emergency stop

All movement can be immediately halted by depressing the red, mushroom shaped button on the pendant control.

Attention: Operating the red emergency button does NOT automatically disconnect the mains supply to hoist or trolley. To release the emergency stop, rotate the button in an anti-clockwise direction.



Yale Electric Chain Hoist CPE

6. SERVICE

- Service and inspections may only be carried out by a competent person.
- The inspection must determine that all safety devices are present and fully operational and covers the condition of the hoist, lifting gear, accessories and supporting constructions.
- The service intervals and inspections noted are for normal working conditions. Adverse working conditions, e.g. heat or chemical environments, can dictate shorter periods.
- The Yale electric chain hoists conform to FEM group 1Am resp. 1Bm in accordance with FEM 9.511. This results in a theoretical service lifetime of 800 resp. 400 operating hours under full load. This is equivalent to 10 years under normal operating conditions. After this period the hoist requires a general overhaul. Further information is contained in VBG 9 resp. FEM 9.755.

6.1 Daily checks

- 1.) Visually check the pendant control switch and cable for damage.
- 2.) Check that the brake functions correctly.
- 3.) Check that the overload safety device functions correctly.
- 4.) Electric chain hoists with trolley:
 - Check that the trolley runway is free from obstructions
 - Check that the end stops on the trolley runway are fitted and secure.

6.2 Regular inspections, service, testing

According to national and international safety regulations hoisting equipment must be inspected at least annually by a competent person. Adverse working conditions, e.g. heat or chemical environments, can dictate shorter periods. The commissioning and inspection details can be noted on the test certificate delivered with the hoist or on page 30 of this manual. Repairs may only be carried out by specialist workshops that use original Yale spare parts.

Attention: Tests must - as far as possible - be carried out in an unloaded condition and the hoist / trolley currentless.

| Inspection and Maintenance | Initial checks | | | Periodical checks | | |
|---|----------------------|--------------------------|---------------------------|-------------------|---------------------------|----------|
| | during commissioning | after 50 operating hours | after 200 operating hours | daily | after 200 operating hours | annually |
| electrical installation and power supply | • | | | | | • |
| Pendant control and support wire | • | • | | • | | |
| Lubricate load chain | • | • | • | | • | |
| Check for wear in chain drive | | • | • | | • | |
| Check function of overload device | • | | | • | | |
| Check function of brake | • | | | • | | |
| Inspect chain bolts for cracks | | • | | | | • |
| Inspect suspension and load hook for cracks and deformation | | • | | | | • |
| Check screwed connections for tightness | | • | | | | • |
| Inspect trolley components for cracks and deformation | | • | | | | • |
| Check oil level | • | • | | | • | |
| Oil change | | | • | | | • |
| Inspect motor and transmission of hoist | | | | | | • |
| Inspect motor and transmission of trolley | | | | | | • |
| Lubricate geared trolley drive | | | | | | • |



6.3 LOAD CHAIN

The Yale load chain is grade 80 chain with the dimensions 11 x 31 mm. The CPE electric hoists are specially designed to use this type of chain. For this reason only chains that have been approved by the manufacturer may be used in these hoists.

Lubricating the load chain

The load chain is to be lubricated before initial operation and every 3 months but the latest after 200 operating hours. Adverse working conditions, e.g. excessive dust or continued heavy duty can dictate shorter periods between lubrication.

- Before the chain is lubricated it must be cleaned. Flame cleaning is forbidden. Use only cleansing methods and agents that do not corrode the chain material. Avoid cleansing methods that can lead to hydrogen brittleness, e.g. spraying or dipping chain in caustic solvents. Also avoid surface treatments that can hide cracks and flaws or other surface damage.
- The chain must be lubricated in a no-load condition so that lubricant can enter between the links, e.g. by dipping in oil.
- Motor oil of the viscosity 100, e.g. Shell Tonna T68 can be used to lubricate the chain. For very dusty applications use a dry lubricant.

Inspecting the load chain for wear


Load chains must be inspected every 3 months or the latest after 200 operating hours (see VBG 8 § 27 or local regulations).

Visually inspect the chain over its full length for deformation, cracks, flaws, elongation, wear or corrosive pitting.

Link chains must be replaced when the nominal thickness "d" on any part of the chain has been reduced by more than 10% or when the pitch "t" is elongated by more than 2% or over 11 pitches (11 x t) by 2%. Nominal dimensions and wear limits are shown in the following table.

Chains that do not fulfil all requirements must be replaced immediately.

| Link chain 11 x 31 grade 80 | | | |
|-----------------------------|-----------------------|--------------------|-----------------|
| Inspection | Dimension | Nominal value [mm] | Wear limit [mm] |
| Length over 11 pitches | 11 · t | 341 | 347 |
| Length of 1 pitch | t | 31 | 32 |
| Mean thickness | $\frac{d_1 + d_2}{2}$ | 11,3 | 10,2 |

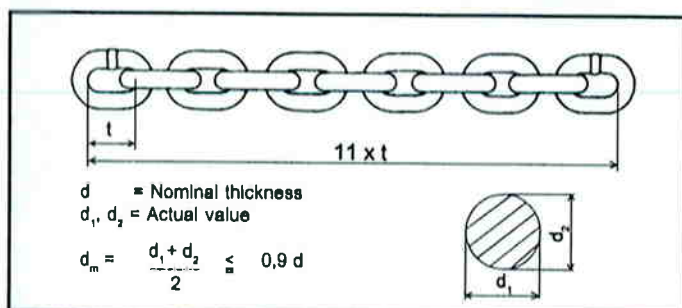

Replace the load chain

1-strand design

1. Disassemble bottom block
Remove the circlip with suitable pliers. Raise the swivel tube in the direction of the chain and tap out the chain bolt with a drift.

Attention: Do not damage the chain bolt bore.

2. Remove the chain end stop.

Remove the 2 screws. The chain is now free.

3. Fitting the new chain

Cut the second to last link open on the loose end of the load chain to form a "C". Remove the last link and connect the new chain. The new chain must be fitted so that the welds on the standing links face towards the chain guide and away from the load sheave. Operate the hoist in the lowering direction to feed the chain through the hoist.

4. Fitting lower block and chain end stop

Slide the end buffers over the loose ends of the load chain and refit bottom block and chain end stop. The chain end stop must be fitted so that at least 1 link remains free (see Fig. 1)

5. Before initial operation lubricate the unloaded chain and test all hoist functions under no-load condition.

2-strand design

1. Remove the chain anchor bolt

The chain anchor bolt is situated on the underside of the hoist body. With an Allen key remove the grub screw that serves as locking device. Tap out the chain anchor bolt with a drift from the other side.

Attention: Do not damage anchor bolt or bore.

2. Pull the load chain through the bottom block and remove the chain end stop.

3. Fitting the new chain

Cut the second to last link open on the loose end of the load chain to form a "C". Remove the last link and connect the new chain. The new chain must be fitted so that the welds on the standing links face towards the chain guide in the housing. Operate the hoist in the lowering direction to feed the chain through the hoist.

4. Replace chain end stop

Slide the buffer pad over the loose end of the load chain and refit the chain end stop ensuring that at least 1 link remains free (see Fig. 1).

5. Fitting the chain anchor bolt

Inspect the chain anchor bolt for flaws, cracks or burrs. Enter the last link of the other load chain end into the slot in the underside of the hoist body. Attention: The chain must not be twisted. Now enter the chain anchor bolt through the side bore. Move the last link back and forth while entering the chain anchor bolt to ensure that it is not trapped and damaged by the anchor bolt. Secure the anchor bolt with the grub screw.

6. Assemble the bottom block

Check the idler sheave for damage. Position the load chain over the idler sheave ensuring that the welds on the standing links face away. Grease the needle bearings in the bottom block halves. Place the load hook assembly in the slot provided in one of the bottom block halves and push the complete unit onto the idler sheave. Ensuring that the buffer pad is situated correctly in its groove replace the second bottom block half and secure with the screws.



Yale Electric Chain Hoist CPE

7. Functional test

All units with two or more chain strands must be inspected before every operation for twisted or kinked chains. Chains on 2-strand units may become twisted if the bottom block is rolled over. If a strand is twisted disconnect it from the hoist and re-thread it correctly. In some cases it may be necessary to remove the last link.

8. Before initial operation lubricate the unloaded chain and test all hoist functions under a no-load condition.

6.4 Load and suspension hooks

Inspect the hooks for deformation, damage, surface cracks, wear and signs of corrosion as required but **at least annually**. Adverse working conditions may dictate shorter periods. Hooks that do not fulfill all requirements must be replaced immediately. Welding on hooks to compensate for wear or damage is not permissible. Hooks must be replaced when the mouth of the hook has opened more than 10% (Fig. 14) or the nominal value of other dimensions has decreased by 5% due to wear. Nominal dimensions and wear limits are shown in the following table.

| Inspection | Dim. | CPE 16 / 20 CPE 25 / 30 | | CPE 32 / 40 / 50 | |
|--------------|----------------|----------------------------|---------------|------------------|---------------|
| | | Nominal value mm | Wear limit mm | Nominal value mm | Wear limit mm |
| Hook saddle | b ₂ | 24 | 22,8 | 29,5 | 28 |
| Hook saddle | h ₂ | 35 | 33,2 | 44,5 | 42,3 |
| Hook opening | a ₂ | 43 | 47,3 | 54 | 59,4 |

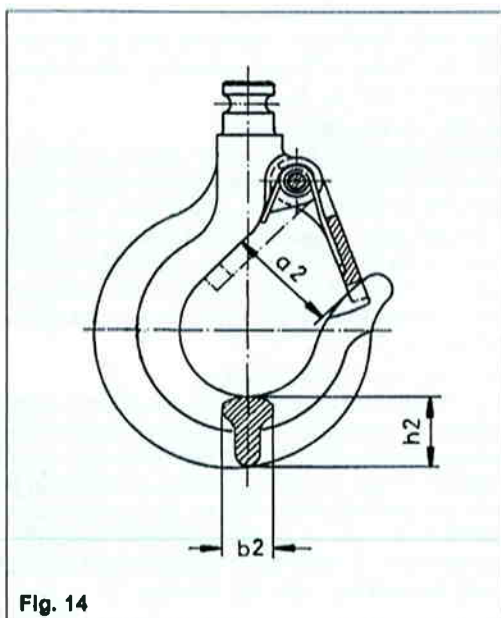


Fig. 14

6.5 Trolleys

In particular check following parts:

- Side plate
For cracks or deformation in particular around the areas of screwed connections.
- Trolley wheels
Visually check for cracks and wear on trolley wheel flanges. Grease the transmission.
- Crossbars
In particular around threaded areas for cracks.
- Fasteners
Check nuts, screws and locking devices for tightness.

6.6 Electric chain hoist in general

In particular check following parts:

- Threaded connections in general
Check all nuts, screws and locking devices for tightness.
- Chain container
Ensure the chain container is securely fastened. Check for cracks or wear.
- Suspension pins
(Connection between hoist and suspension hook resp. trolley) Check for cracks or wear. Ensure all safety devices are in place and secure.

6.7 Overload protection device

The overload protection device (slipping clutch) is factory set to 110% ± 10% of the rated capacity and can be checked by lifting a suitable load. If the device slips at the rated capacity load it can be adjusted as follows (see Fig. 19):

- Unscrew the threaded pin (9) which locks the straining screw (45).
- Increase the moment of friction by turning the straining screw (45) in clockwise direction.
- Re-check the adjustment with a suitable load.
- Lock the straining screw (45) with the threaded pin (9).

6.8 Gearbox

The gearbox is practically maintenance-free. Service is therefore reduced to checking the oil level and changing the oil.

Check oil level

Ensure that the hoist is horizontal and has been stationary for at least 30 minutes (this allows the oil to drain to the lower part of the gearbox). Remove the screw plug (Fig. 19, item 47). The oil level should be up to the lower edge of the fill hole.

Oil change

The oil (approx. 0,3 l) is to be changed every 5 years or at the latest after 400 operating hours.

Remove the threaded pin with counter nut of the slipping clutch as well as the screw plug. Place the hoist horizontally and turn so that the oil can drain from the fill hole into a suitable container (approx. 30 minutes). Replenish the gearbox oil. We recommend a mineral oil viscosity class ISO-VG 460, e.g. FINA GIRAN L 460. The tapered screw plug can be reused. Finally re-adjust the overload protection device.



Disassemble the gearbox

Attention: The gearbox has oil lubrication

1. Place the gearbox flange down on a ring so that only the flange has contact.
2. Remove the setscrew (9) and plastic ball (51).
3. Remove the thrust collar (45) and plug (47).
4. Remove the cup spring (44).
5. Tip the gearbox and drain oil into a suitable container.
6. Remove snap rings (5, 53), remove the bearing (4) to be able to release the second snap ring (5).
7. Tap the gearbox shaft (29) with a wooden or rubber hammer and remove it from the flange side.
8. Remove the transportation lock (48, 49).

Attention: The internal parts can now slip out of the housing if the gearbox is tipped.

9. Remove bearing plate (38) with bearing (42) and radial seal (40).
10. Remove all internal parts. After removing the key (28) (M6 internal thread) tap the flange facing with a rubber hammer to ease the removal of the annulus (19, 27). Remove thrust washer (18).
11. Remove planet carrier (11) and planet gears (15) with their needle bearings (17).
12. Release snap ring (10) and remove thrust washer (8), annulus (7), friction discs (6) and bearing plate (3).
13. Drive the planet gear shafts out of the planet carrier (11).

Attention: Drive the shafts out straight and do not damage the running surface.

Remove planet gears (37), spacers (36), thrust washers (14) and needle bearings (17).

14. Remove bearing (32) and seal (31).

Clean, inspect and replace all worn parts.

Parts subject to wear are: thrust washers (14), needle bearings (17), O-Rings and seals (31, 39, 41, 52) and gasket (53).

Reassemble the gearbox

Reassemble the gearbox in the reverse order ensuring that the planetary gears (37), needle bearings (17) and thrust washers (14) are fitted correctly in the planet carrier (30).

The friction discs (6) on both sides of the annulus (7) are to be soaked in oil (soak for at least one hour in oil before assembly).

The exact adjustment of the overload device is only possible when the unit is completely reassembled (see section 6.7). Pre-adjustment of the cup spring (44) is made with the thrust collar (45).

After the exact adjustment has been made the thrust collar is secured by the plastic ball (51) and setscrew (9).

Fill the gearbox with 0,3 ltr. of gearbox oil (CLP 560 acc. to DIN 51547) and replace the plug (47).

6.9 MOTOR

Motor

Under normal conditions the motor is practically maintenance-free. Every 2 1/2 years the bearings are to be inspected, cleaned and repacked half-full with grease. We recommend K 3 N / KL 3 N DIN 51825 / DIN 51502.

Disc brake

Service to the disc brake is reduced to checking and adjusting the brake air gap. The disc brake air gap should be between 0,2 and 0,6 mm (this guarantees a short reaction time and low noise emission). When the wear and tear of the brake lining comes down to the point where the max. possible air gap has finally been reached, it is indispensable to carry out a re-adjustment of the brake (the max. permissible air gaps are shown in the table below).

- 3.1 Remove fan guard M14.
- 3.2 Loosen binding screws B14.
- 3.3 Remove O-ring B62, insert spacer blocks B40 between armature disc B42 and adhesive plate B16 (thickness of the spacer blocks is to be found in the table below).
- 3.4 Tighten screws B31, or - in case of two shaft extensions - nut B35 to an extent as to permit the removal of the spacer blocks B40.
- 3.5 Evenly tighten the binding screws B14. Please tighten first screw placed opposite of the fitting key (for the permissible torque consult the table below).
- 3.6 Tighten screw B31 once more.
- 3.7 Remove spacer blocks B40.
- 3.8 Put on fan guard M14.
- 3.9 Make a test run for checking the brake function.

Attention: Do not allow the brake friction pads to come into contact with lubricant or similar.

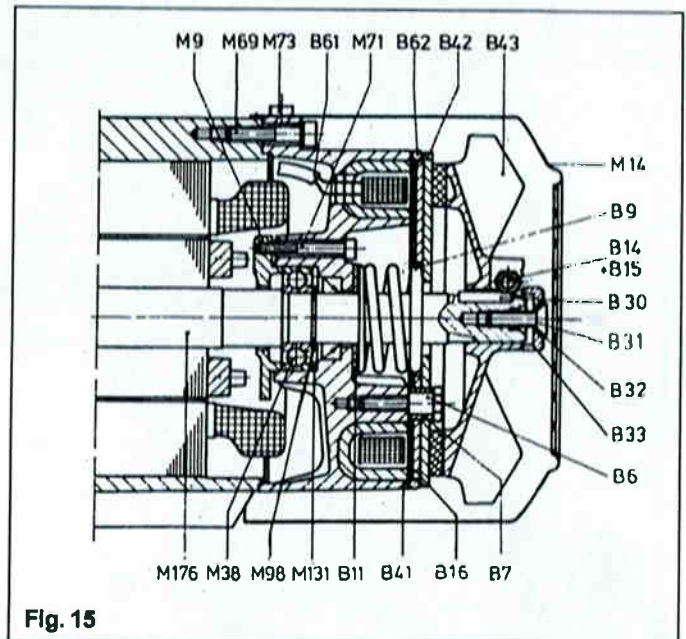


Fig. 15

| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 |
|------|----------------------|---------------------------|-----------------------|-------------------|---------------------------|---------------------------|--------------------------|--------------------|------------------|-------------------------------|
| Type | Nominal brake torque | Fan B43 with brake lining | Spacer block B40 (mm) | Air gap max. (mm) | Pressure spring B9 colour | Tightening torque for B14 | Tightening torque for B6 | Adhesive plate B16 | Threaded pin B71 | Quantity of fitting plate B11 |
| EBF | 20,2 Nm | WS 5907 | - | 0,6 | no colour | 7 - 9 Nm | 7 + 0,5 Nm | no | M 5x80 | 0 |



Yale Electric Chain Hoist CPE

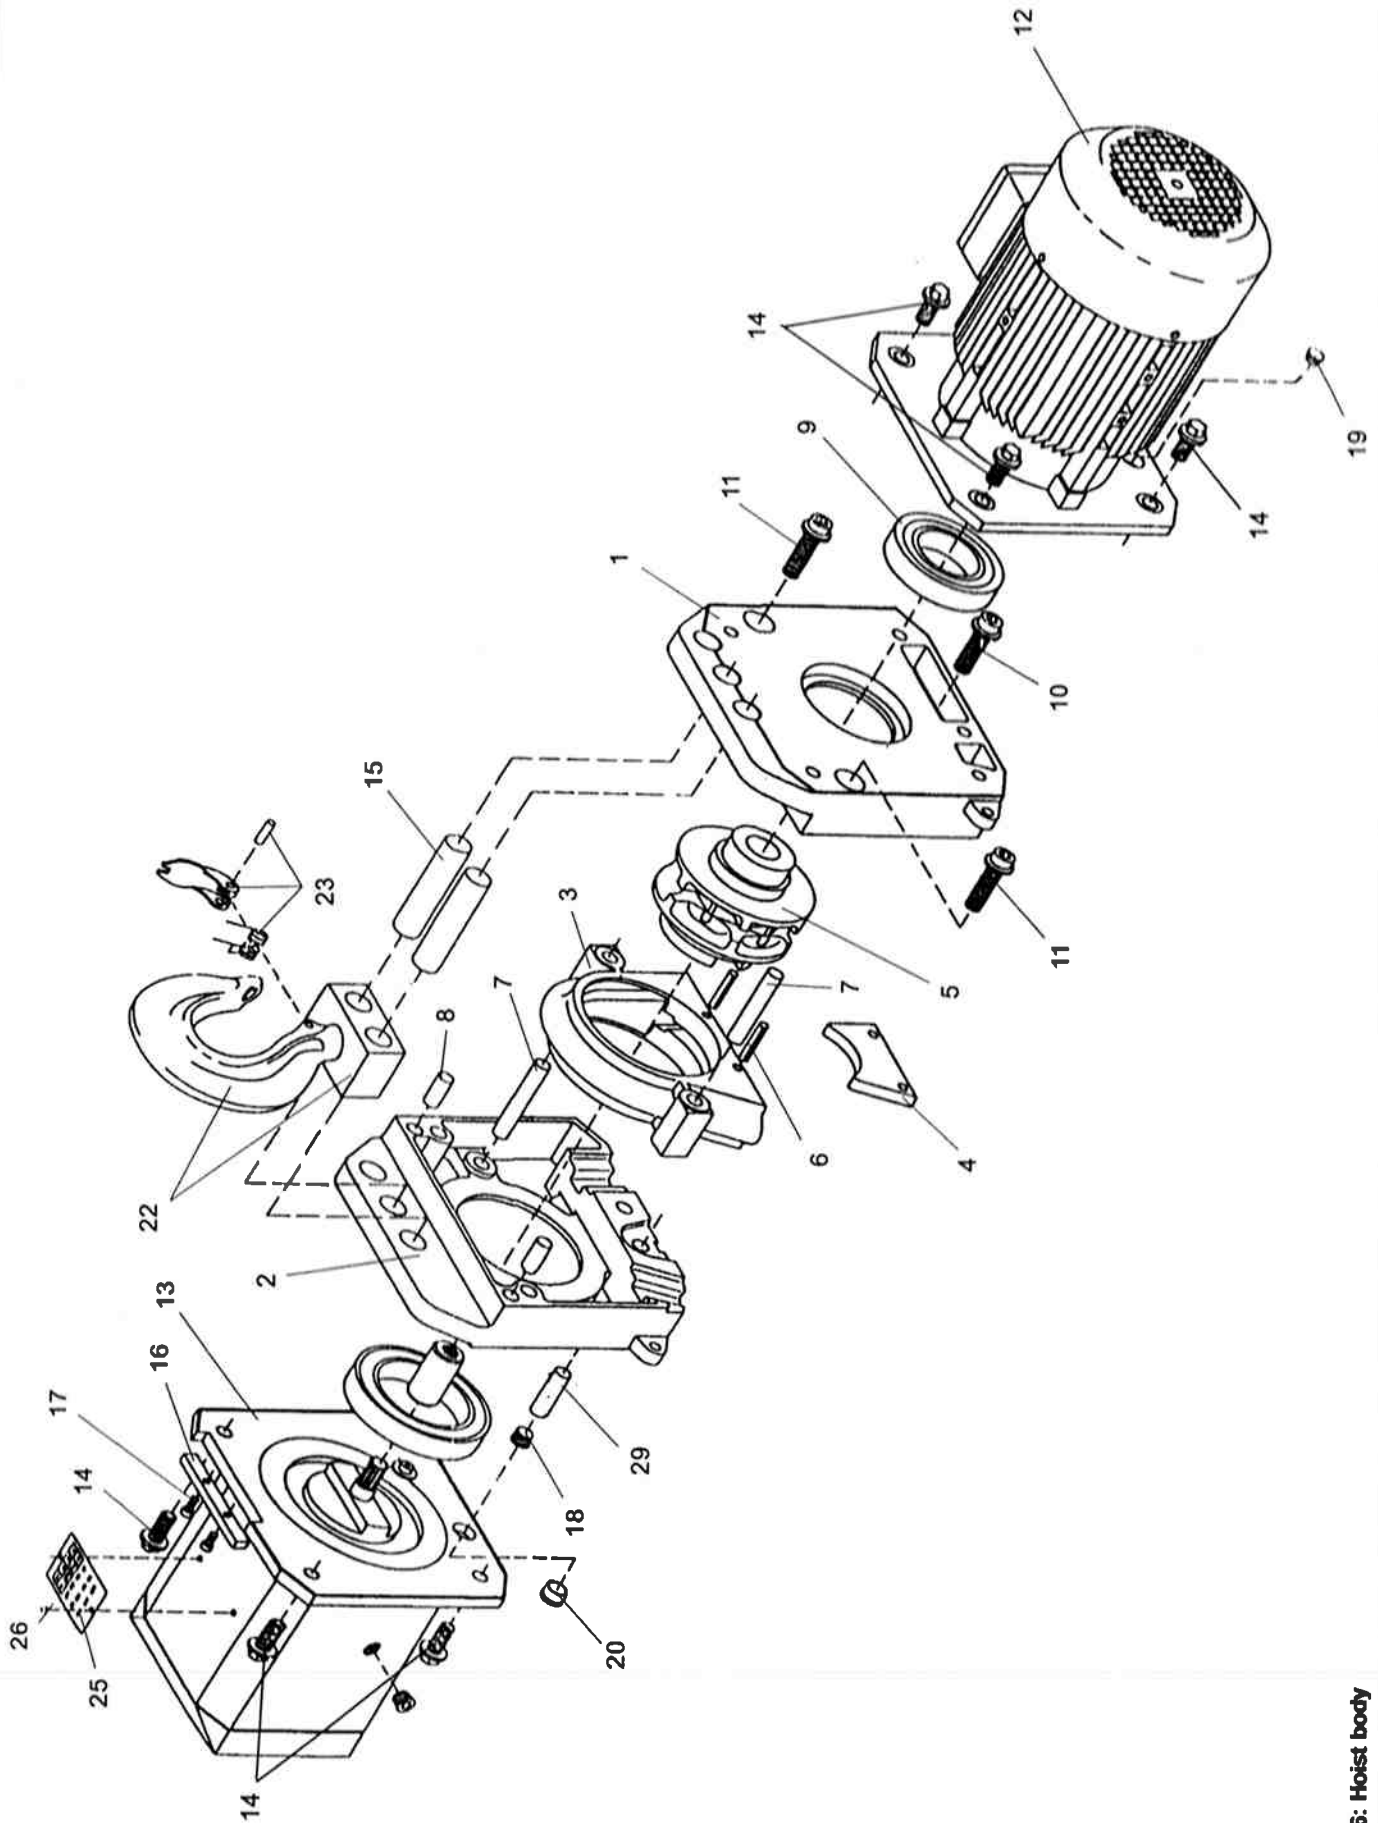


Fig. 16: Hoist body

Yale Electric Chain Hoist CPE



| Item No. | Description | Qty. | Yale Part No. | | | | | | | | | | |
|----------|---------------------------|------|---------------|------------|------------|------------|------------|------------|------------|---------|---------|---------|---------|
| | | | CPE / F 16 | CPE / F 20 | CPE / F 25 | CPE / F 30 | CPE / F 32 | CPE / F 40 | CPE / F 50 | | | | |
| 1-11 | Main frame assy. | 1 | 0609449 | 0609449 | 0609449 | 0609449 | 0609449 | 0609449 | 0609449 | 0609449 | 0609449 | 0609449 | 0609449 |
| 1 | Housing half - motor side | 1 | 0608972 | 0608972 | 0608972 | 0608972 | 0608972 | 0608972 | 0608972 | 0608972 | 0608972 | 0608972 | 0608972 |
| 2 | - gearbox side | 1 | 0608974 | 0608974 | 0608974 | 0608974 | 0608974 | 0608974 | 0608974 | 0608974 | 0608974 | 0608974 | 0608974 |
| 3 | Chain guide | 1 | 0608976 | 0608976 | 0608976 | 0608976 | 0608976 | 0608976 | 0608976 | 0608976 | 0608976 | 0608976 | 0608976 |
| 4 | Chain stripper | 1 | 0608978 | 0608978 | 0608978 | 0608978 | 0608978 | 0608978 | 0608978 | 0608978 | 0608978 | 0608978 | 0608978 |
| 5 | Load sheave | 1 | 0609374 | 0609374 | 0609374 | 0609374 | 0609374 | 0609374 | 0609374 | 0609374 | 0609374 | 0609374 | 0609374 |
| 6 | Roll pin | 2 | 9134001 | 9134001 | 9134001 | 9134001 | 9134001 | 9134001 | 9134001 | 9134001 | 9134001 | 9134001 | 9134001 |
| 7 | Straight pin | 2 | 9124169 | 9124169 | 9124169 | 9124169 | 9124169 | 9124169 | 9124169 | 9124169 | 9124169 | 9124169 | 9124169 |
| 8 | Straight pin | 2 | 9124111 | 9124111 | 9124111 | 9124111 | 9124111 | 9124111 | 9124111 | 9124111 | 9124111 | 9124111 | 9124111 |
| 9 | Ball bearing | 1 | 9151106 | 9151106 | 9151106 | 9151106 | 9151106 | 9151106 | 9151106 | 9151106 | 9151106 | 9151106 | 9151106 |
| 10 | Cyl. screw | 1 | 9102253 | 9102253 | 9102253 | 9102253 | 9102253 | 9102253 | 9102253 | 9102253 | 9102253 | 9102253 | 9102253 |
| 11 | Cyl. screw | 2 | 9102254 | 9102254 | 9102254 | 9102254 | 9102254 | 9102254 | 9102254 | 9102254 | 9102254 | 9102254 | 9102254 |
| 12 | Brake motor - 1 speed | 1 | 0600116 | 0600116 | 0600116 | 0600116 | 0600116 | 0600116 | 0600116 | 0600116 | 0600116 | 0600116 | 0600116 |
| | - 2 speeds | 1 | 0600117 | 0600117 | 0600117 | 0600117 | 0600117 | 0600117 | 0600117 | 0600117 | 0600117 | 0600117 | 0600117 |
| 13 | Planetary gear | 1 | 0609678 | 0609678 | 0608814 | 0608814 | 0608814 | 0609678 | 0609678 | 0609678 | 0609678 | 0608814 | 0608814 |
| 14 | Hex. screw | 8 | 9101660 | 9101660 | 9101660 | 9101660 | 9101660 | 9101660 | 9101660 | 9101660 | 9101660 | 9101660 | 9101660 |
| 15 | Suspension bolt | 2 | 0609388 | 0609388 | 0609388 | 0609388 | 0609388 | 0609388 | 0609388 | 0609388 | 0609388 | 0609388 | 0609388 |
| 16 | Bolt locking device | 1 | 0609448 | 0609448 | 0609448 | 0609448 | 0609448 | 0609448 | 0609448 | 0609448 | 0609448 | 0609448 | 0609448 |
| 17 | Cyl. screw | 2 | 9102150 | 9102150 | 9102150 | 9102150 | 9102150 | 9102150 | 9102150 | 9102150 | 9102150 | 9102150 | 9102150 |
| 18 | Screw plug | 2 | 9110007 | 9110007 | 9110007 | 9110007 | 9110007 | 9110007 | 9110007 | 9110007 | 9110007 | 9110007 | 9110007 |
| 19 | Screw plug | 1 | 9192000 | 9192000 | 9192000 | 9192000 | 9192000 | 9192000 | 9192000 | 9192000 | 9192000 | 9192000 | 9192000 |
| 20 | Screw plug | 1 | 9192003 | 9192003 | 9192003 | 9192003 | 9192003 | 9192003 | 9192003 | 9192003 | 9192003 | 9192003 | 9192003 |
| 21 | Screw plug | 1 | 9192002 | 9192002 | 9192002 | 9192002 | 9192002 | 9192002 | 9192002 | 9192002 | 9192002 | 9192002 | 9192002 |
| 22-23 | Suspension hook assy. | 1 | 0609393 | 0609393 | 0609393 | 0609393 | 0609393 | 0609393 | 0609393 | 0609393 | 0609393 | 0609393 | 0609393 |
| 23 | Safety latch kit | 1 | 0408671 | 0408671 | 0408671 | 0408671 | 0408671 | 0408671 | 0408671 | 0408671 | 0408671 | 0408671 | 0408671 |
| 25 | Identity plate - 1 speed | 1 | 0609614 | 0609996 | 0609456 | 0609744 | 0609614 | 0609614 | 0609614 | 0609997 | 0609456 | 0609456 | 0609456 |
| | - 2 speeds | 1 | 0609615 | 0609998 | 0609457 | 0609745 | 0609615 | 0609615 | 0609615 | 0609999 | 0609457 | 0609457 | 0609457 |
| 26 | Grooved nail | 2 | 9128004 | 9128004 | 9128004 | 9128004 | 9128004 | 9128004 | 9128004 | 9128004 | 9128004 | 9128004 | 9128004 |
| - | Capacity decal | 1 | 0609694 | 0600002 | 0609695 | 0609696 | 0609694 | 0609694 | 0609694 | 0609692 | 0600001 | 0609511 | 0609511 |
| - | Nameplate | 2 | 0609692 | 0609692 | 0609692 | 0609692 | 0609692 | 0609692 | 0609692 | 0609692 | 0609692 | 0609692 | 0609692 |
| 29 | Chain anchor bolt | 1 | - | - | - | - | - | - | - | - | - | - | 0608855 |



Yale Electric Chain Hoist CPE


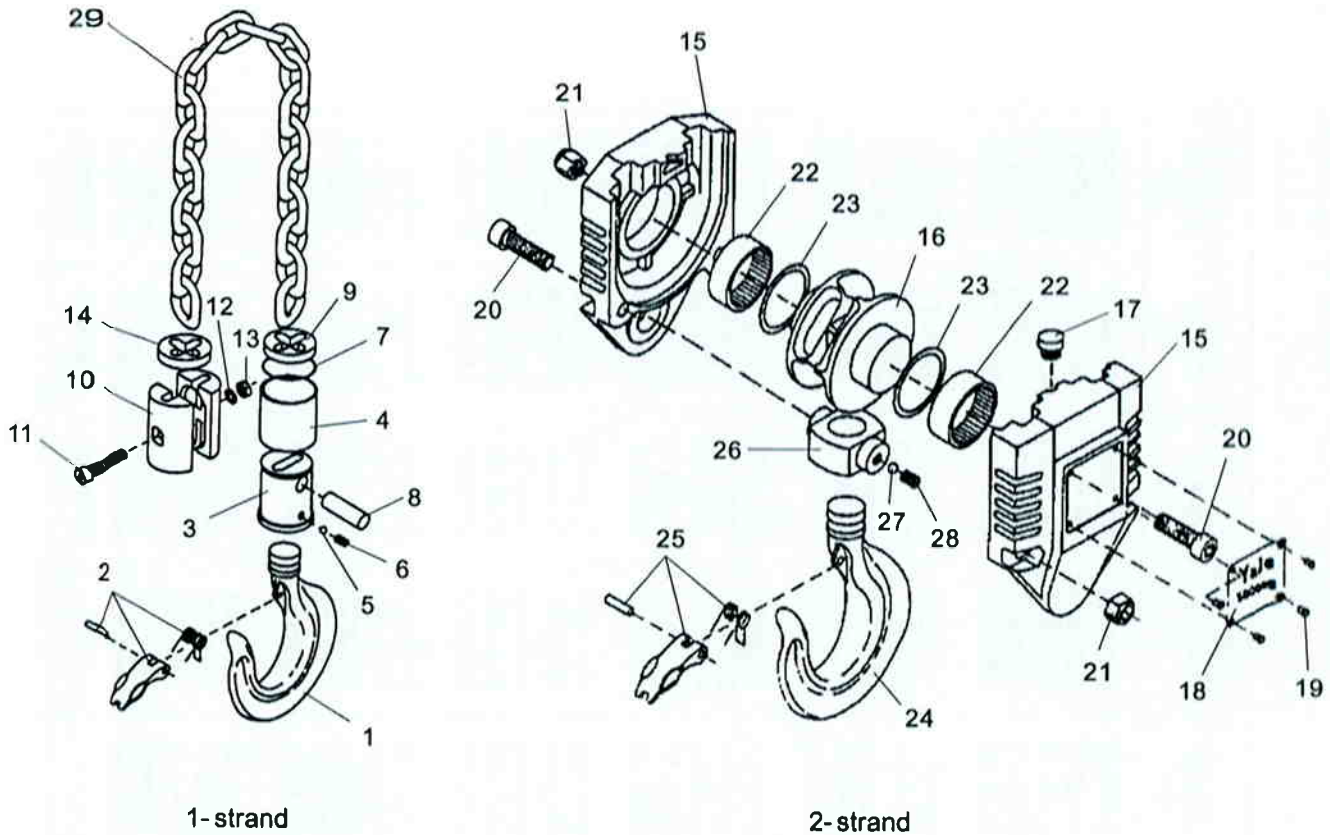


Fig. 17: Bottom blocks

| Item No. | Description | Qty. | CPE / F 16 CPE / F 20 CPE / F 25 CPE / F 30 |
|----------|----------------------------|------|--|
| 1-8 | Bottom block assy. 1600 kg | 1 | 0609684 |
| | Bottom block assy. 2000 kg | 1 | 0609993 |
| | Bottom block assy. 2500 kg | 1 | 0609677 |
| | Bottom block assy. 3000 kg | 1 | 0609909 |
| 1-2 | Load hook assy. | 1 | 0408430 |
| 2 | Safety latch kit | 1 | 0408671 |
| 3 | Load hook coupling | 1 | 0608851 |
| 4 | Swivel tube 1600 kg | 1 | 0609683 |
| | Swivel tube 2000 kg | 1 | 0600003 |
| | Swivel tube 2500 kg | 1 | 0609399 |
| | Swivel tube 3000 kg | 1 | 0609908 |
| 5 | Ball set (15 pcs. Ø 5) | 1 | 0404767 |
| 6 | Threaded pin | 1 | 9114030 |
| 7 | Snap ring | 1 | 9139020 |
| 8 | Chain bolt | 1 | 0608855 |
| 9 | Buffer | 1 | 0609734 |
| 10-14 | Chain end stop assy. | 1 | 0609995 |
| 10 | Chain end stop half | 2 | 0608867 |
| 11 | Cyl. screw | 1 | 9102019 |
| 12 | Lockwasher | 1 | 9122032 |
| 13 | Hex. nut | 1 | 9115014 |
| 14 | Buffer | 1 | 0609734 |


| Item No. | Description | Qty. | CPE / F 32 CPE / F 40 CPE / F 50 |
|----------|-----------------------------|------|--|
| 15-23 | Bottom block assy. 3200 kg | 1 | 0609681 |
| | Bottom block assy. 4000 kg | 1 | 0609994 |
| | Bottom block assy. 5000 kg | 1 | 0609510 |
| 15 | Swivel half | 2 | 0609495 |
| 16 | Idler sheave | 1 | 0609505 |
| 17 | Buffer | 1 | 0601704 |
| 18 | Capacity plate 3200 kg | 2 | 0609682 |
| | Capacity plate 4000 kg | 2 | 0600001 |
| | Capacity plate 5000 kg | 2 | 0609511 |
| 19 | Grooved nail Ø 3 x 4 | 8 | 9128004 |
| 20 | Cyl. screw | 2 | 9102053 |
| 21 | Hex. nut | 2 | 9115118 |
| 22 | Needle bearing | 2 | 9153083 |
| 23 | Spacer | 2 | 9121218 |
| 24-28 | Load hook assy. | 1 | 0408434 |
| 25 | Safety latch kit | 1 | 0408672 |
| 26 | Crosshead | 1 | 0407389 |
| 27 | Ball set (16 pcs. Ø 6) | 1 | 0404799 |
| 28 | Threaded pin | 1 | 9114184 |
| 29 | Load chain (specify length) | | 6109488 |

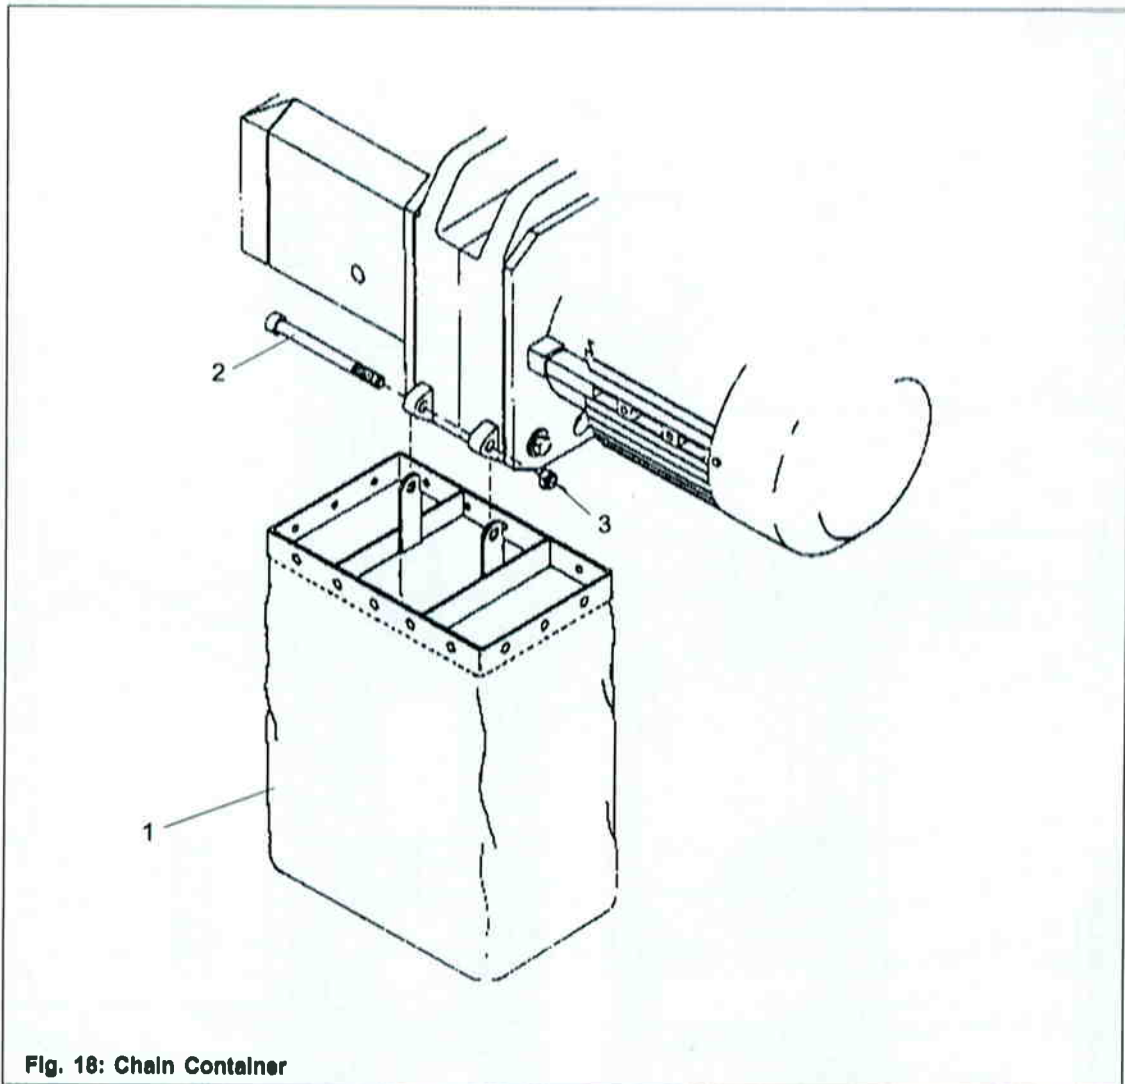

| Item No. | Description | Qty. | Yale Part No. all models |
|----------|--|------|-----------------------------|
| 1 | Chain container assy for 13 m linear chain length | 1 | 6109467 |
| 1 | Chain container assy for 21 m linear chain length | 1 | 6109468 |
| 2 | Cyl. screw | 1 | 9102255 |
| 3 | Hex. nut | 1 | 9115098 |



Yale Electric Chain Hoist CPE

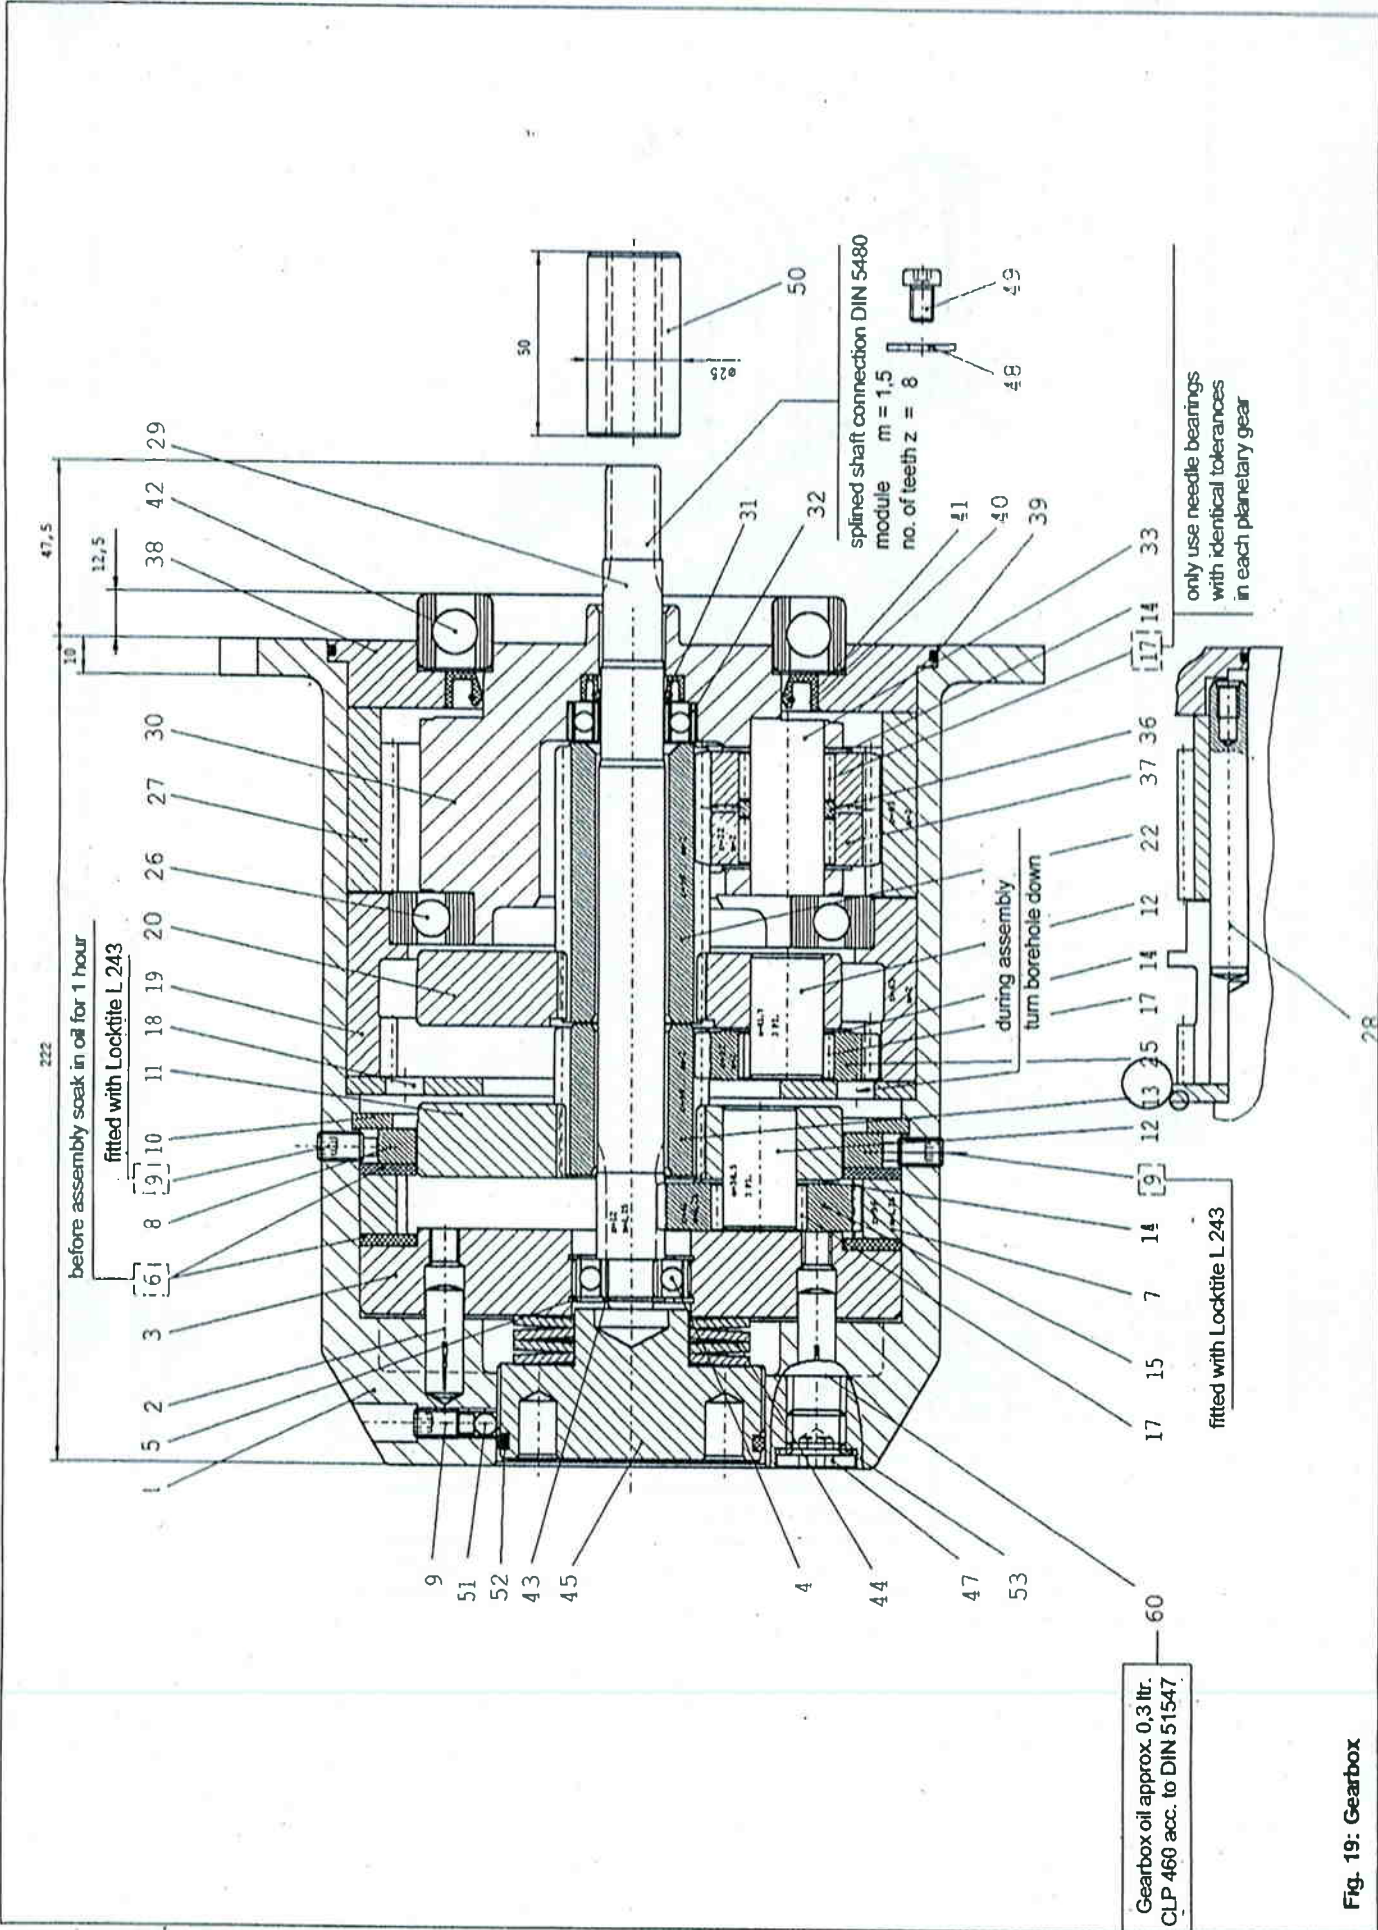

Gearbox oil approx. 0,3 ltr.
CLP 460 acc. to DIN 51547

Fig. 19: Gearbox

Yale Electric Chain Hoist CPE



| Item No. | Description | Qty. | CPE / F 16 | | | Item No. | Description | Qty. | CPE / F 26 | | |
|----------|-------------------------|------|------------|------------|------------|----------|-------------------------|------|------------|------------|--|
| | | | CPE / F 20 | CPE / F 32 | CPE / F 40 | | | | CPE / F 30 | CPE / F 50 | |
| - | Planetary gearbox assy. | 1 | 0609678 | | | - | Planetary gearbox assy. | 1 | 0608814 | | |
| 1 | Gearbox housing | 1 | 0600163 | | | 1 | Gearbox housing | 1 | 0600163 | | |
| 2 | Grooved pin | 2 | 0600164 | | | 2 | Grooved pin | 2 | 0600164 | | |
| 3 | Bearing plate | 1 | 0600165 | | | 3 | Bearing plate | 1 | 0600165 | | |
| 4 | Bearing | 1 | 9150022 | | | 4 | Bearing | 1 | 9150022 | | |
| 5 | Snap ring | 2 | 9130005 | | | 5 | Snap ring | 2 | 9130005 | | |
| 6 | Friction disc | 2 | 0608909 | | | 6 | Friction disc | 2 | 0608909 | | |
| 7 | Annulus | 1 | 0600166 | | | 7 | Annulus | 1 | 0600166 | | |
| 8 | Thrust washer | 1 | 0600167 | | | 8 | Thrust washer | 1 | 0600167 | | |
| 9 | Setscrew | 3 | 0600168 | | | 9 | Setscrew | 3 | 0600168 | | |
| 10 | Snap ring | 1 | 9130058 | | | 10 | Snap ring | 1 | 9130058 | | |
| 11 | Planet carrier assy. | 1 | 0600198 | | | 11 | Planet carrier assy. | 1 | 0600198 | | |
| 13 | Sun gear | 1 | 0600170 | | | 13 | Sun gear | 1 | 0600170 | | |
| 14 | Thrust washer | 12 | 9153043 | | | 14 | Thrust washer | 12 | 9153043 | | |
| 15 | Planet gear | 3 | 0600199 | | | 15 | Planet gear | 3 | 0600171 | | |
| 17 | Needle bearing | 12 | 9153090 | | | 17 | Needle bearing | 12 | 9153090 | | |
| 18 | Thrust washer | 1 | 0600172 | | | 18 | Thrust washer | 1 | 0600172 | | |
| 19 | Annulus | 1 | 0600173 | | | 19 | Annulus | 1 | 0600173 | | |
| 20 | Planet carrier | 1 | 0600174 | | | 20 | Planet carrier | 1 | 0600174 | | |
| 22 | Sun gear | 1 | 0600175 | | | 22 | Sun gear | 1 | 0600175 | | |
| 25 | Planet gear | 3 | 0600176 | | | 25 | Planet gear | 3 | 0600176 | | |
| 26 | Bearing | 1 | 9150082 | | | 26 | Bearing | 1 | 9150082 | | |
| 27 | Annulus | 1 | 0600177 | | | 27 | Annulus | 1 | 0600177 | | |
| 28 | Pin | 2 | 9124174 | | | 28 | Pin | 2 | 9124174 | | |
| 29 | Gearbox shaft | 1 | 0600178 | | | 29 | Gearbox shaft | 1 | 0600178 | | |
| 30 | Planet gear carrier | 1 | 0600179 | | | 30 | Planet gear carrier | 1 | 0600179 | | |
| 31 | Seal | 1 | 9172110 | | | 31 | Seal | 1 | 9172110 | | |
| 32 | Bearing | 1 | 9150043 | | | 32 | Bearing | 1 | 9150043 | | |
| 33 | Planetary gear shaft | 3 | 0600180 | | | 33 | Planetary gear shaft | 3 | 0600180 | | |
| 36 | Spacer | 3 | 0600181 | | | 36 | Spacer | 3 | 0600181 | | |
| 37 | Planet gear | 3 | 0600182 | | | 37 | Planet gear | 3 | 0600182 | | |
| 38 | Bearing plate | 1 | 0600183 | | | 38 | Bearing plate | 1 | 0600183 | | |
| 39 | O-Ring | 1 | 9171351 | | | 39 | O-Ring | 1 | 9171351 | | |
| 40 | Seal | 1 | 9172111 | | | 40 | Seal | 1 | 9172111 | | |
| 41 | Shim | 1 | 9121234 | | | 41 | Shim | 1 | 9121234 | | |
| 42 | Bearing | 1 | 9151101 | | | 42 | Bearing | 1 | 9151101 | | |
| 43 | Snap ring | 4 | 9129038 | | | 43 | Snap ring | 4 | 9129038 | | |
| 44 | Cup spring | 1 | 9120039 | | | 44 | Cup spring | 1 | 9120039 | | |
| 45 | Thrust collar | 1 | 0600184 | | | 45 | Thrust collar | 1 | 0600184 | | |
| 47 | Plug | 1 | 9110052 | | | 47 | Plug | 1 | 9110052 | | |
| 48 | Washer | 1 | 9121004 | | | 48 | Washer | 1 | 9121004 | | |
| 49 | Screw | 1 | 9102032 | | | 49 | Screw | 1 | 9102032 | | |
| 50 | Coupling | 1 | 0608879 | | | 50 | Coupling | 1 | 0608879 | | |
| 51 | Plastic ball | 1 | - | | | 51 | Plastic ball | 1 | - | | |
| 52 | O-Ring | 1 | 9171162 | | | 52 | O-Ring | 1 | 9171162 | | |
| 53 | Seal | 1 | 9179004 | | | 53 | Seal | 1 | 9179004 | | |

Attention: When ordering spare parts always indicate serial number and mfg. year of hoist



Yale Electric Chain Hoist CPE

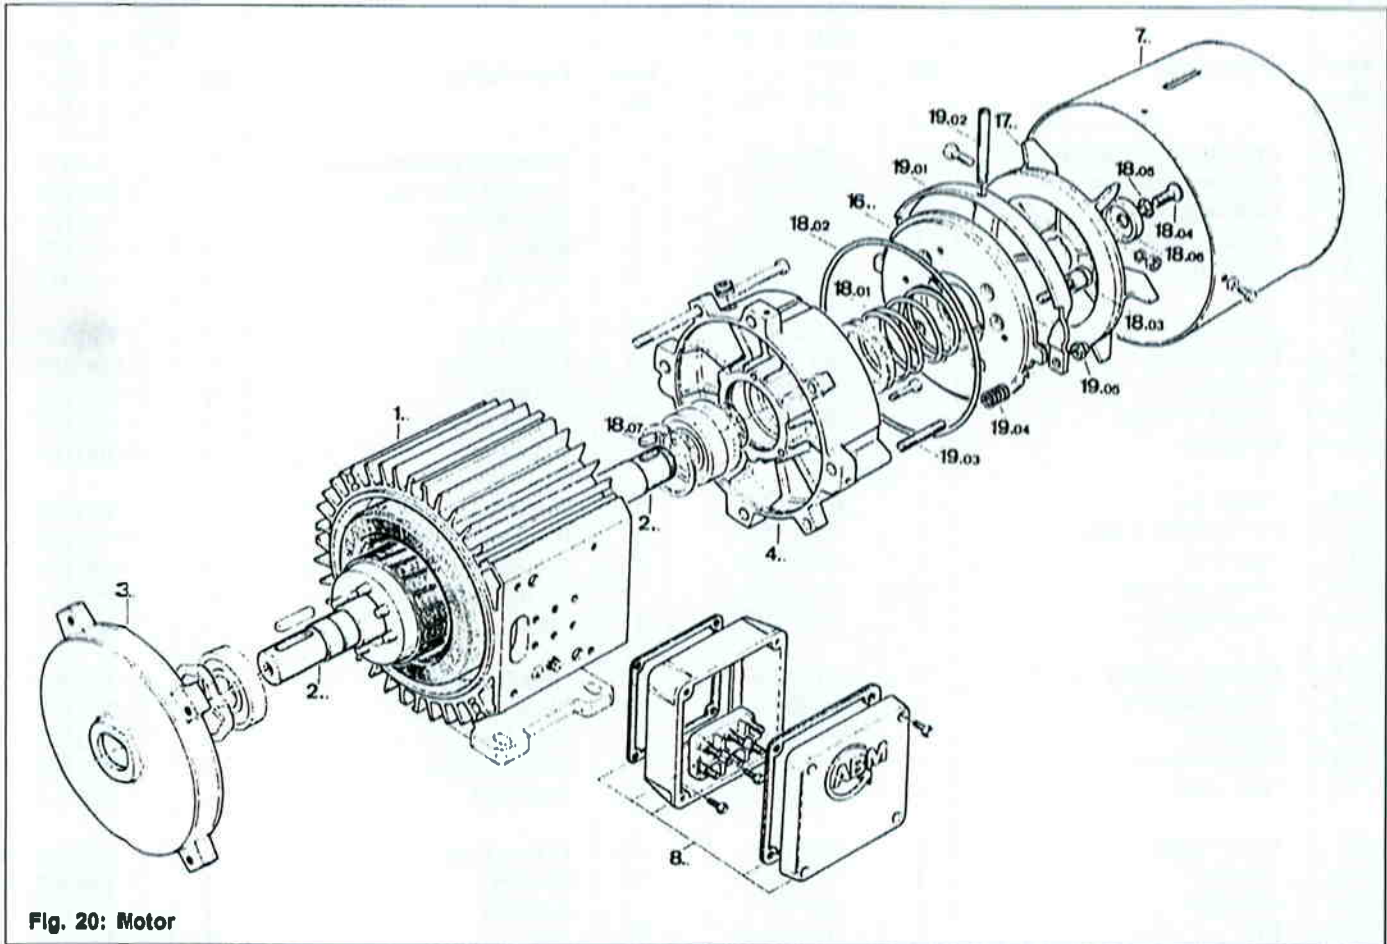


Fig. 20: Motor

| Item No. | Description | Qty. | CPE 1-speed | CPEF 2-speed |
|----------|---|------|-------------|--------------|
| - | Motor assy. | 1 | 0600116 | 0600117 |
| 1 .. | Stator | 1 | 0600185 | 0600196 |
| 2 .. | Rotor | 1 | 0600186 | 0600197 |
| 3 .. | Bearing plate, A-side | 1 | 0600187 | 0600187 |
| 4 .. | Bearing plate, B-side | 1 | 0600188 | 0600188 |
| 7 .. | Fan cover | 1 | 0600189 | 0600189 |
| 8 .. | Terminal box assy. (board, box, box cover box seal) | 1 | 0600190 | 0600190 |
| 9 .. | Rectifier | 1 | 0600110 | 0600110 |
| 16 .. | Armature disc | 1 | 0600113 | 0600113 |
| 17 .. | Brake fan | 1 | 0600112 | 0600112 |
| 18 .. | Fitting parts set for mounting the brake (brake spring, O-ring, cap screw, washers, fitting key) | 1 | 0600194 | 0600194 |
| 19 .. | Manual brake release system (optional) | 1 | 0600195 | 0600195 |

Attention: When ordering spare parts always indicate serial number and mfg. year of hoist

Yale Electric Chain Hoist CPE

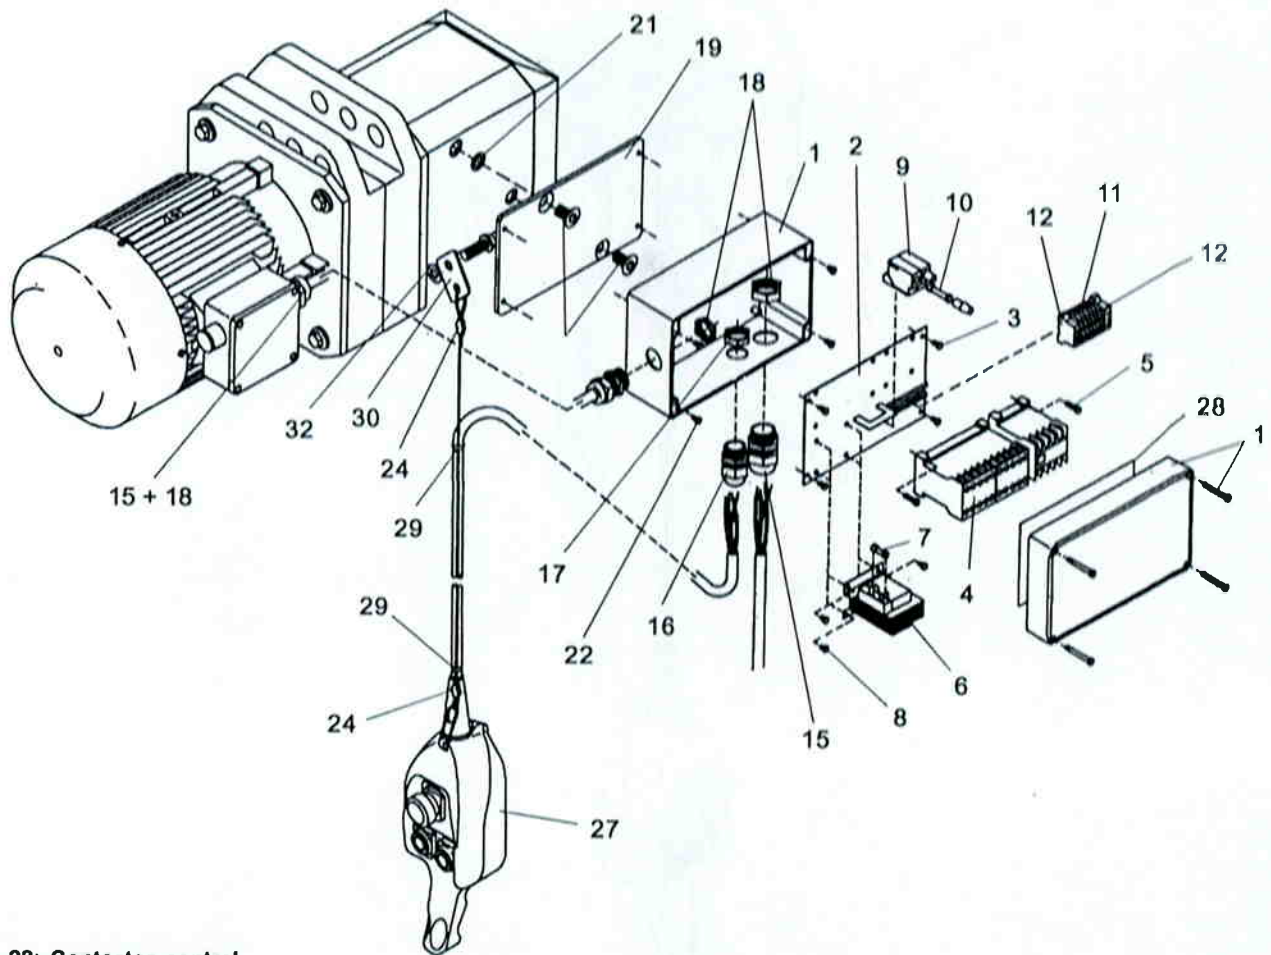


Fig. 22: Contactor control

| Item No. | Description | Qty. | Yale Part No. all models |
|----------|-----------------------|------|--------------------------|
| 1 | Housing | 1 | 0609810 |
| 2 | Mounting plate | 1 | 0609792 |
| 3 | Screw | 4 | 9108018 |
| 4 | Reversing starter | 1 | 0609558 |
| 5 | Screw | 4/8* | 9107005 |
| 6 | Transformer | 1 | 0719737 |
| 7 | Fine-wire fuse | 1 | 9190128 |
| 8 | Screw | 4 | 9107032 |
| 9 | Fuse carrier | 2 | 0609808 |
| 10 | Fine-wire fuse | 2 | 9190128 |
| 11 | Terminal | 6/7* | 0609811 |
| 12 | PE conductor terminal | 2 | 0609812 |
| | Name tag 1 | 1 | 0609813 |
| | Name tag 2 | 1 | 0609814 |
| | Name tag 3 | 1 | 0609815 |
| | Name tag 4 | 1 | 0609816 |
| | Name tag L1 | 1 | 0609817 |
| | Name tag L2 | 1 | 0609818 |
| | Name tag L3 | 1 | 0609819 |
| | Name tag PE | 1 | 0609820 |
| | Name tag | 3 | 0609821 |
| | Name tag F5 | 1 | 0609822 |
| | Name tag F6 | 1 | 0609823 |

| Item No. | Description | Qty. | Yale Part No. all models |
|----------|------------------------------|------|--------------------------|
| 15 | Screw fitting | 3 | 9184082 |
| 16 | Screw fitting | 1 | 9184081 |
| 17 | Counter-nut | 1 | 9184085 |
| 18 | Counter-nut | 3 | 9184088 |
| 19 | Plate | 1 | 0609788 |
| 20 | Screw | 2 | 9103013 |
| 21 | Washer | 2 | 9121001 |
| 22 | Cyl. screw | 4 | 9107023 |
| 23 | Connecting cable (CPE only) | 1* | 0609828 |
| | Connecting cable (CPEF only) | 1* | 0609829 |
| 24 | Rope clamp | 2 | 0605355 |
| 25 | Tension relief wire | 1 | 0609561 |
| 26 | Control cable (CPE only) | 1 | 0606562 |
| | Control cable (CPEF only) | 1* | 0609563 |
| 27 | Control switch (CPE only) | 1 | 0609566 |
| | Control switch (CPEF only) | 1 | 0609567 |
| 28 | Wiring diagram (CPE only) | 1 | 0609571 |
| | Wiring diagram (CPEF only) | 1 | 0609572 |
| 29 | Tape | 5 | 9181113 |
| 30 | Fastener | 1 | 0608882 |
| 31 | Hex. Screw | 1 | 9101661 |
| 32 | Washer | 1 | 9121006 |
| 33 | Contactor | 1* | 0609574 |



Yale Electric Chain Hoist CPE

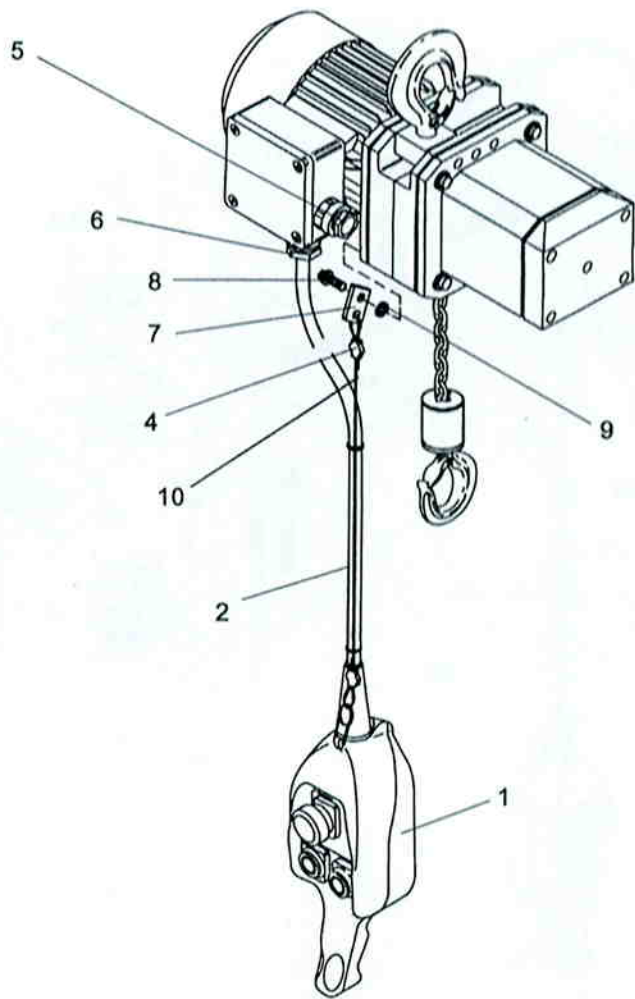


Fig. 23: Direct control

| Item No. | Description | Qty. | CPE 1-speed | CPEF 2-speed |
|----------|--|------|-------------|--------------|
| 1 | Pendant control assy with emergency stop | 1 | 0809454 | 0809455 |
| 2 | Control cable (specify length) | - | 9082407 | 9082407 |
| 3 | Wiring diagram | 1 | 0808631 | 0808632 |
| 4 | Clamp | 2 | 0805355 | 0805355 |
| 5 | Screw fitting | 1 | 9184082 | 9184082 |
| 6 | Screw fitting | 1 | 9184084 | 9184084 |
| 7 | Fastener | 1 | 0808882 | 0808882 |
| 8 | Hex. screw | 1 | 9101661 | 9101661 |
| 9 | Washer | 1 | 9121006 | 9121006 |
| 10 | Strain relief (specify length) | - | 9093001 | 9093001 |

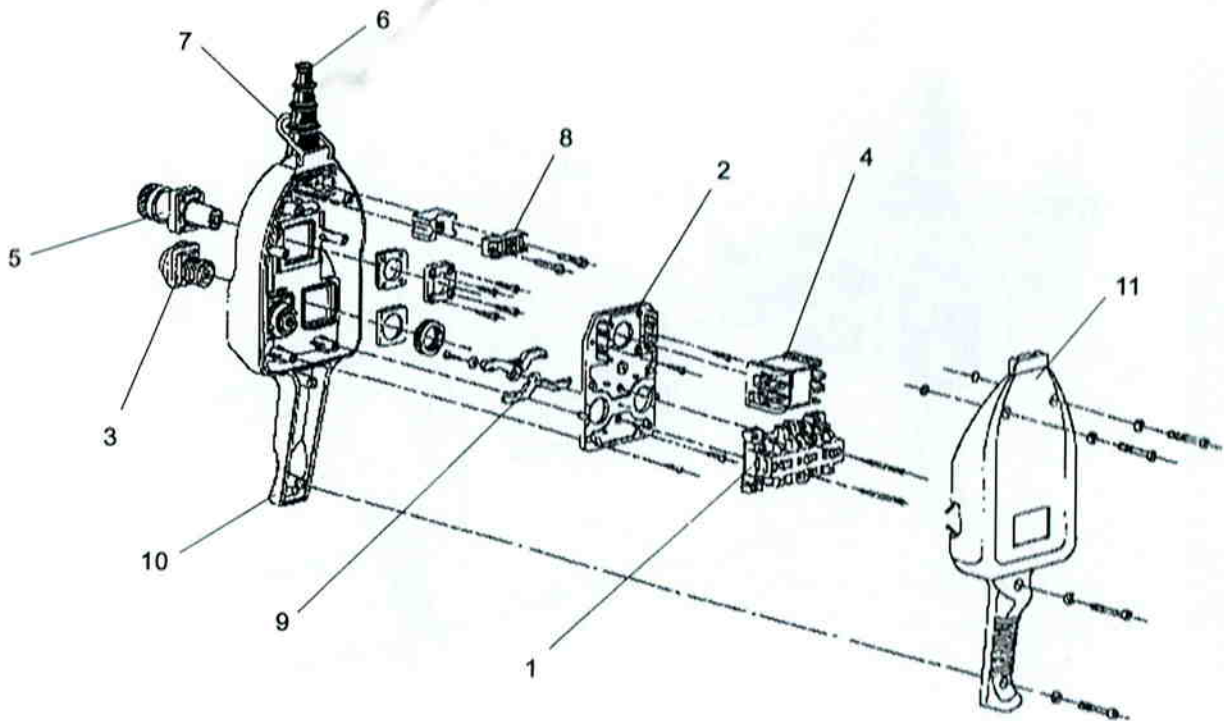


Fig. 24: Pendant switch for direct control

| Item No. | Description | Qty. | CPE 1-speed | CPEF 2-speed |
|----------|--|------|----------------|-----------------|
| - | Pendant control assy. with emergency stop | 1 | 0609454 | 0609455 |
| 1 | Contact element | 1 | 0609686 | 0609687 |
| 2 | Carrier for contact element | 1 | 0609965 | 0609965 |
| 3 | Lowering button DN | 1 | 0609968 | 0609967 |
| | Lifting button UP | 1 | 0609968 | 0609969 |
| 4 | Contact element emerg. stop | 1 | 0609978 | 0609978 |
| 5 | Emergency stop button | 1 | 0609977 | 0609977 |
| 6 | Rubber bushing | 1 | 0609970 | 0609970 |
| 7 | Loop for tension relief device | 1 | 0609971 | 0609971 |
| 8 | Clamping piece | 1 | 0609972 | 0609972 |
| 9 | Interlocking lever | 1 | 0609973 | 0609973 |
| 10 | Front housing | 1 | 0609974 | 0609974 |
| 11 | Rear housing | 1 | 0609975 | 0609975 |



Yale Electric Chain Hoist CPE

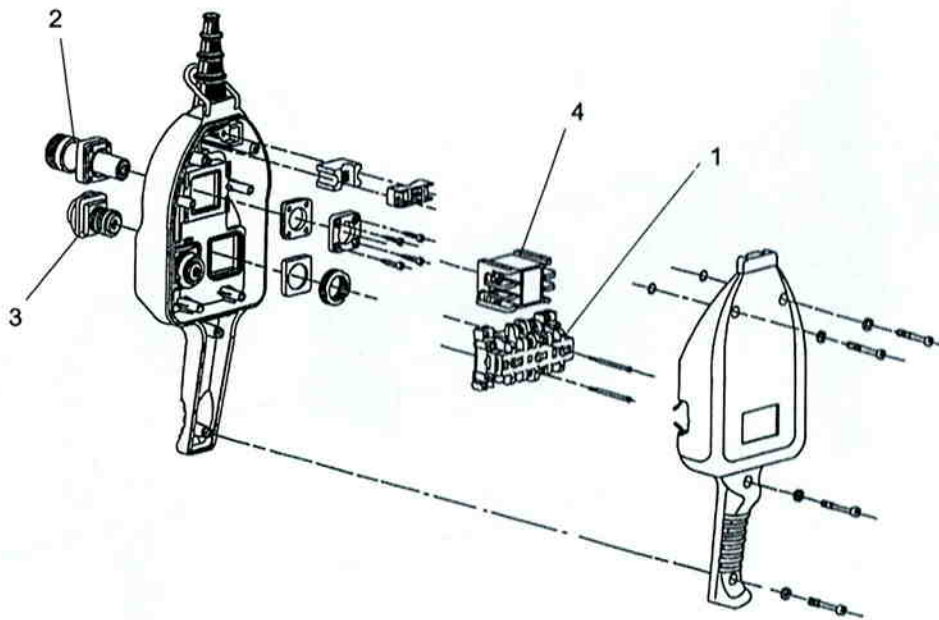


Fig. 25: Pendant switch for contactor control

| Item No. | Description | Qty. | CPE 1-speed | CPEF 2-speed |
|----------|---|------|-------------|--------------|
| - | Pendant control assy. with emergency stop | 1 | 0609566 | 0609567 |
| 1 | Contact element | 1 | 0609980 | 0609981 |
| 2 | Emergency stop button | 1 | 0609984 | 0609984 |
| 3 | Lowering button DN | 1 | 0609985 | 0609986 |
| | Lifting button UP | 1 | 0609987 | 0609988 |
| 4 | Contact element emerg. stop | 1 | 0609982 | 0609983 |

Yale Electric Chain Hoist CPE

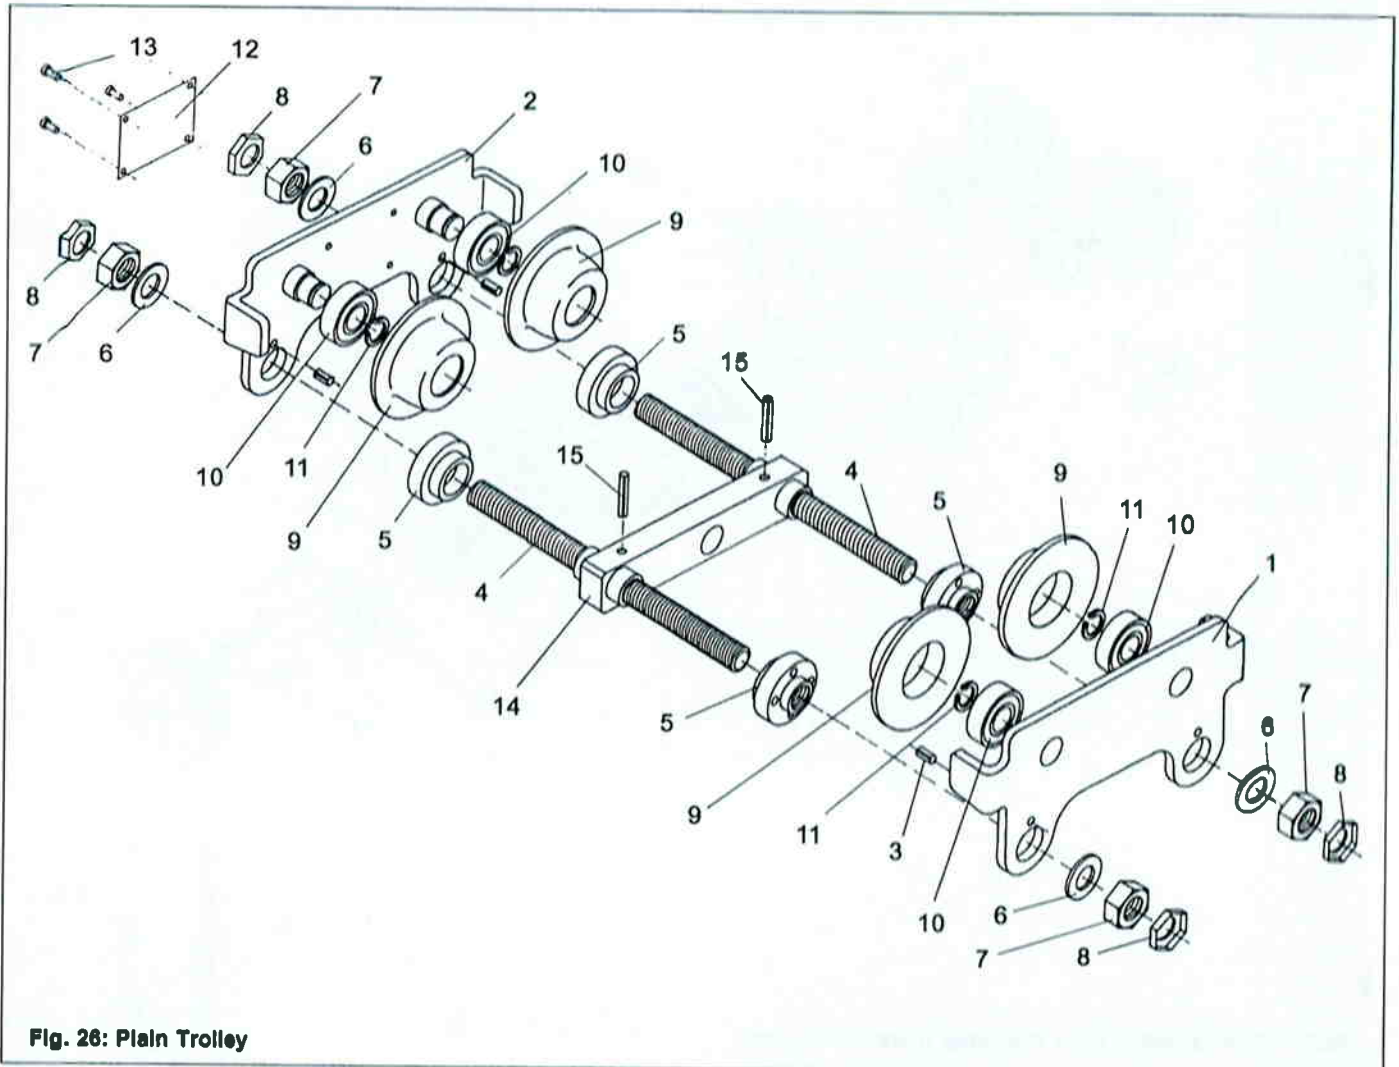


Fig. 26: Plain Trolley

| Item No. | Description | Qty. | Yale Part No. all models |
|----------|-------------------------|------|--------------------------|
| 1 | Side plate | 1 | 0559163 |
| 2 | Side plate | 1 | 0559167 |
| 3 | Roll pin | 4 | 9134120 |
| 4 | Crossbar - beam range A | 2 | 0559169 |
| | Crossbar - beam range B | 2 | 0559170 |
| 5 | Round nut | 4 | 0559168 |
| 6 | Washer | 4 | 9121213 |
| 7 | Hex. nut | 4 | 9115156 |

| Item No. | Description | Qty. | Yale Part No. all models |
|----------|-----------------|------|--------------------------|
| 8 | Locking nut | 4 | 9115155 |
| 9 | Trolley wheel | 4 | 0508210 |
| 10 | Ball bearing | 8 | 9151079 |
| 11 | Snap ring | 4 | 9129003 |
| 12 | Identity plate | 1 | 0559869 |
| 13 | Grooved nail | 4 | 9128004 |
| 14 | Centre traverse | 1 | 0559353 |
| 15 | Roll pin | 2 | 9134002 |



Yale Electric Chain Hoist CPE

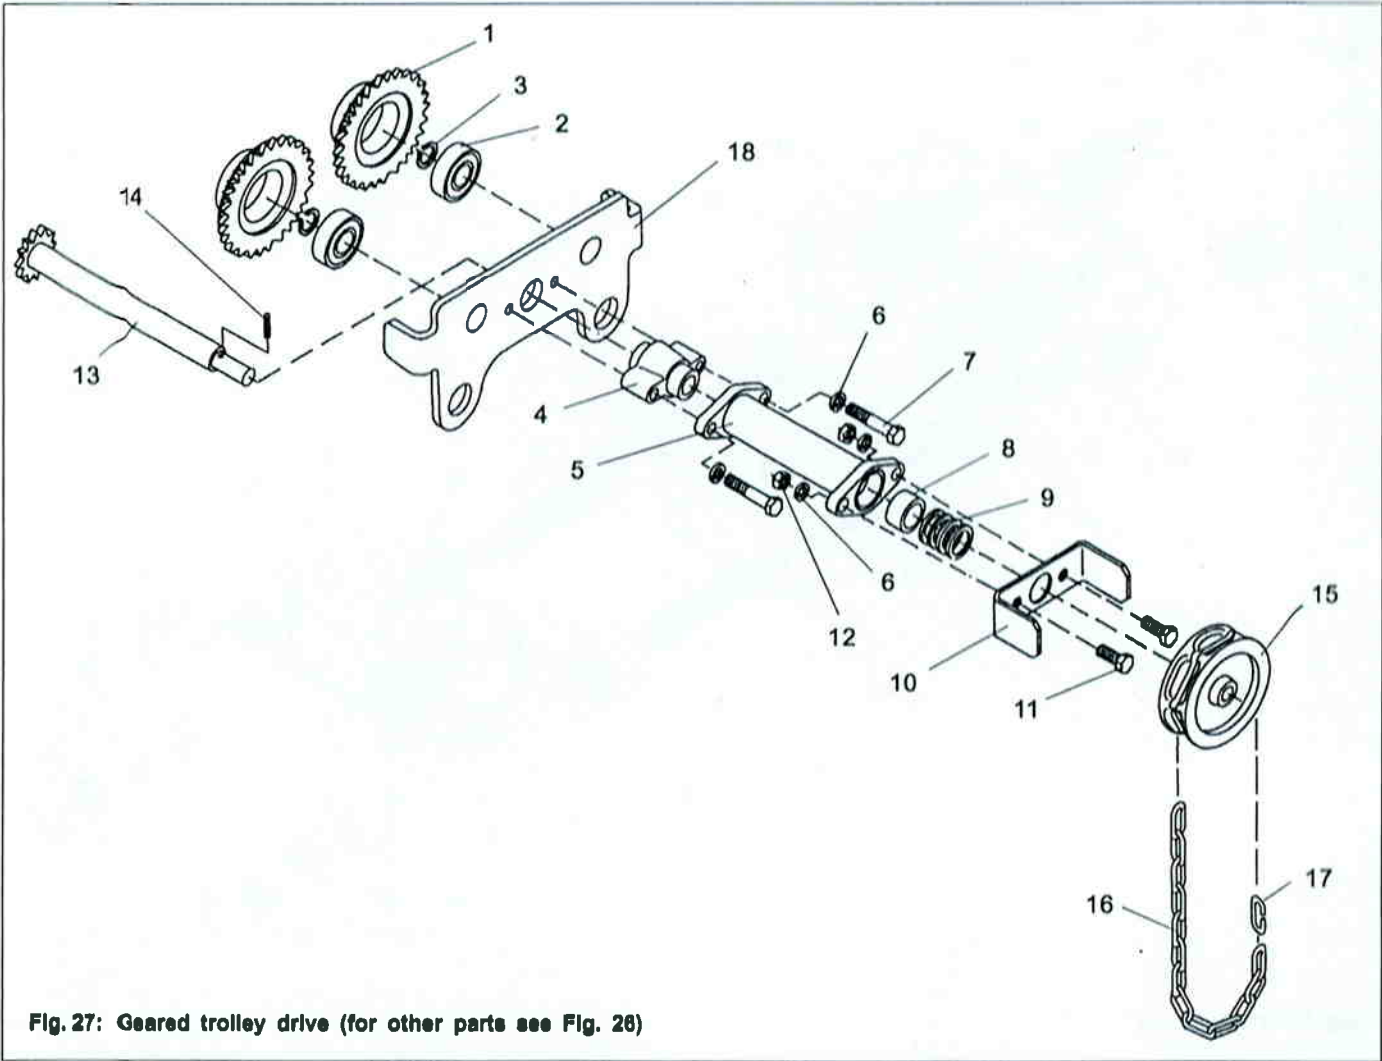


Fig. 27: Geared trolley drive (for other parts see Fig. 26)

| Item No. | Description | Qty. | Yale Part No. all models |
|----------|----------------------|------|--------------------------|
| 1 | Geared trolley wheel | 2 | 0508214 |
| 2 | Ball bearing | 8 | 9151079 |
| 3 | Snap ring | 4 | 9129003 |
| 4 | Support | 1 | 0508229 |
| 5 | Spacer tube | 1 | 0719111 |
| 6 | Lockwasher | 4 | 9122016 |
| 7 | Hex. screw | 2 | 9101050 |
| 8 | Bushing | 1 | 0102503 |
| 9 | Spacer | 4 | 9121205 |

| Item No. | Description | Qty. | Yale Part No. all models |
|----------|-----------------------------|------|--------------------------|
| 10 | Hand chain guide | 1 | 0558062 |
| 11 | Hex. screw | 2 | 9101014 |
| 12 | Hex. nut | 2 | 9115148 |
| 13 | Drive shaft | 1 | 0719671 |
| 14 | Roll pin | 1 | 9134052 |
| 15 | Hand chain wheel | 1 | 0558061 |
| 16 | Hand chain (specify length) | 1 | 4307654 |
| 17 | Connecting link | 1 | 0404733 |
| 18 | Side plate | 1 | 0559165 |

Yale Electric Chain Hoist CPE

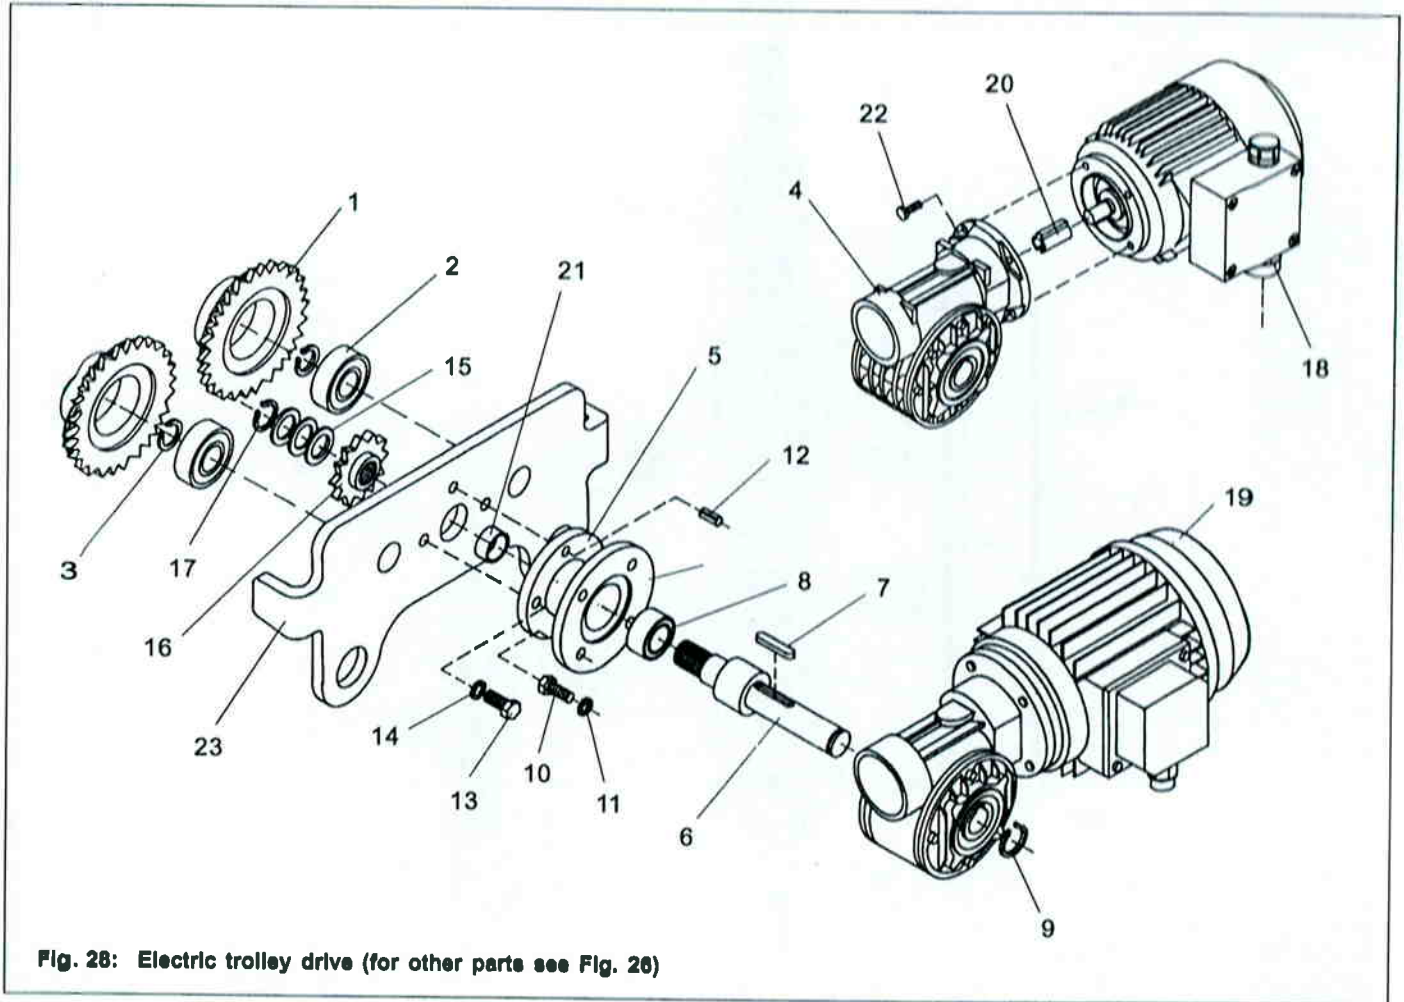


Fig. 28: Electric trolley drive (for other parts see Fig. 26)

| Item No. | Description | Qty. | Yale Part No. all models |
|----------|----------------------|------|--------------------------|
| 1 | Geared trolley wheel | 2 | 0508214 |
| 2 | Ball bearing | 8 | 9151079 |
| 3 | Snap ring | 4 | 9129003 |
| 4 | Worm gear | 1 | 0719784 |
| 5 | Flange | 1 | 0719371 |
| 6 | Drive shaft | 1 | 0719372 |
| 7 | Fitting key | 1 | 9131072 |
| 8 | Needle bearing | 1 | 9153077 |
| 9 | Snap ring | 1 | 9129016 |
| 10 | Hex screw | 4 | 9101170 |
| 11 | Lockwasher | 4 | 9122003 |
| 12 | Roll pin | 1 | 9134080 |

| Item No. | Description | Qty. | Yale Part No. all models |
|----------|-----------------------|------|--------------------------|
| 13 | Hex. nut | 2 | 9101014 |
| 14 | Lockwasher | 2 | 9122004 |
| 15 | Spacer | 7 | 9121215 |
| 16 | Pinion | 1 | 0719373 |
| 17 | Snap ring | 1 | 9123038 |
| 18 | Screw fitting | 1 | 9184082 |
| 19 | Brake motor - 1 speed | 1 | 0609586 |
| | - 2 speeds | 1 | 0609587 |
| 20 | Reducing sleeve | 1 | 0719868 |
| 21 | Bushing | 1 | 0719870 |
| 22 | Hex. screw | 4 | 9101439 |
| 23 | Side plate | 1 | 0559165 |



Yale Electric Chain Hoist CPE

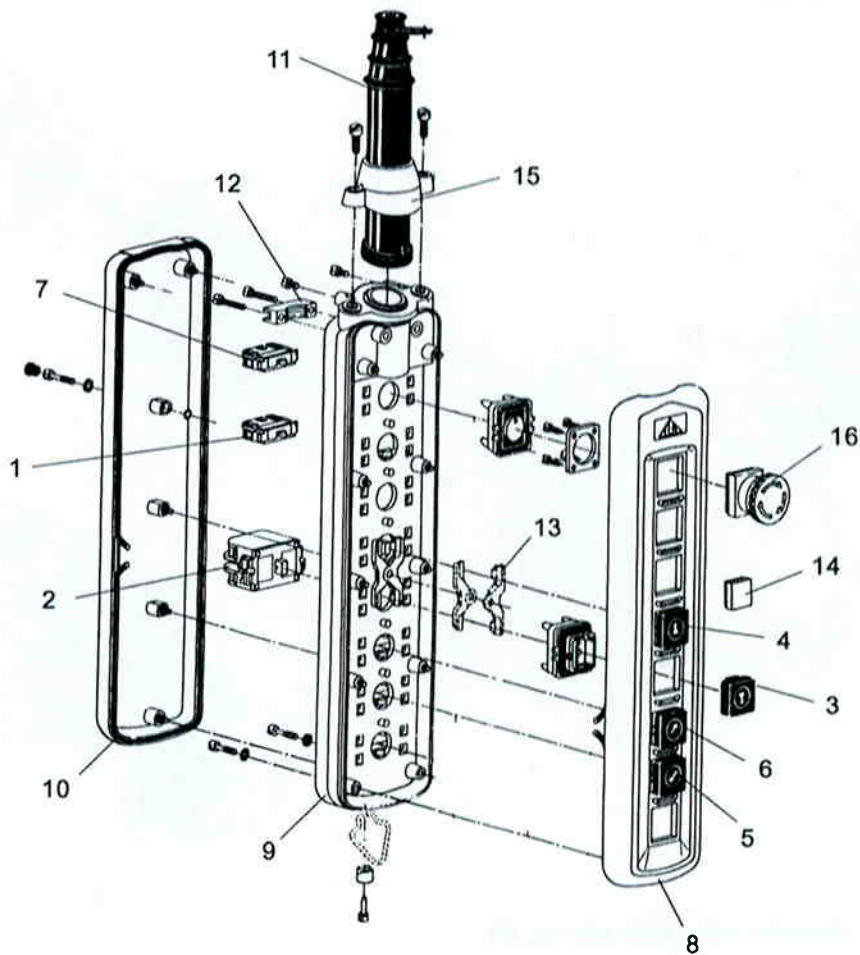


Fig. 29: Pendant switch for electric hoist with electric trolley (direct and contactor control)

| Item No. | Description | Qty. | Pendant switch for direct control | | | | Pendant switch for contactor control | | | |
|----------|--|------|-----------------------------------|------------------------|------------------------|------------------------|--------------------------------------|------------------------|------------------------|------------------------|
| | | | Holst 1G Trolley 1G | Holst 2G Trolley 2G | Holst 2G Trolley 1G | Holst 1G Trolley 2G | Holst 1G Trolley 1G | Holst 2G Trolley 2G | Holst 2G Trolley 1G | Holst 1G Trolley 2G |
| 1-18 | Control switch assy. | 1 | 0609610 | 0609611 | 0609832 | 0609833 | 0609612 | 0609613 | 0609806 | 0609807 |
| 1 | Contact element hoist | 1 | 0609686 | 0609687 | 0609687 | 0609686 | 0600032 | 0600034 | 0600034 | 0600032 |
| | Contact element hoist | 1 | - | - | - | - | 0600033 | - | - | 0600033 |
| 2 | Contact element trolley | 1 | 0600022 | 0600029 | 0600022 | 0600029 | 0600032 | 0600034 | 0600032 | 0600034 |
| | Contact element trolley | 1 | - | - | - | - | 0600033 | - | 0600033 | - |
| 3 | ↓ -button DN, hoist | 1 | 0600023 | 0600030 | 0600030 | 0600023 | 0600023 | 0600030 | 0600030 | 0600023 |
| 4 | ↑ -button UP, hoist | 1 | 0600024 | 0600031 | 0600031 | 0600024 | 0600024 | 0600031 | 0600031 | 0600024 |
| 5 | ← -button LEFT, trolley | 1 | 0600023 | 0600030 | 0600023 | 0600030 | 0600023 | 0600030 | 0600023 | 0600030 |
| 6 | ⇒ -button RIGHT, trolley | 1 | 0600024 | 0600031 | 0600024 | 0600031 | 0600024 | 0600031 | 0600024 | 0600031 |
| 7 | Contact element em. stop | 1/2* | | 0609978 | | | | 0600032 | | |
| 8-10 | Housing assy. without contacts and buttons | 1 | | 0600028 | | | | 0600035 | | |
| 8 | Front housing | 1 | | | | on request | | | | |
| 9 | Housing centre part | 1 | | | | on request | | | | |
| 10 | Rear housing | 1 | | | | on request | | | | |
| 11 | Rubber bushing | 1 | | | | 0600025 | | | | |
| 12 | Clamping piece | 1 | | | | 0609972 | | | | |
| 13 | Interlocking lever | 2 | | | | 0609973 | | | | |
| 14 | Dust cap | 1 | | | | 0600026 | | | | |
| 15 | Rubber bushing support | 1 | | | | 0600027 | | | | |
| 16 | Emergency stop button | 1 | | | | 0609977 | | | | |

* for contactor control only

1G = 1 speed; 2G = 2 speeds

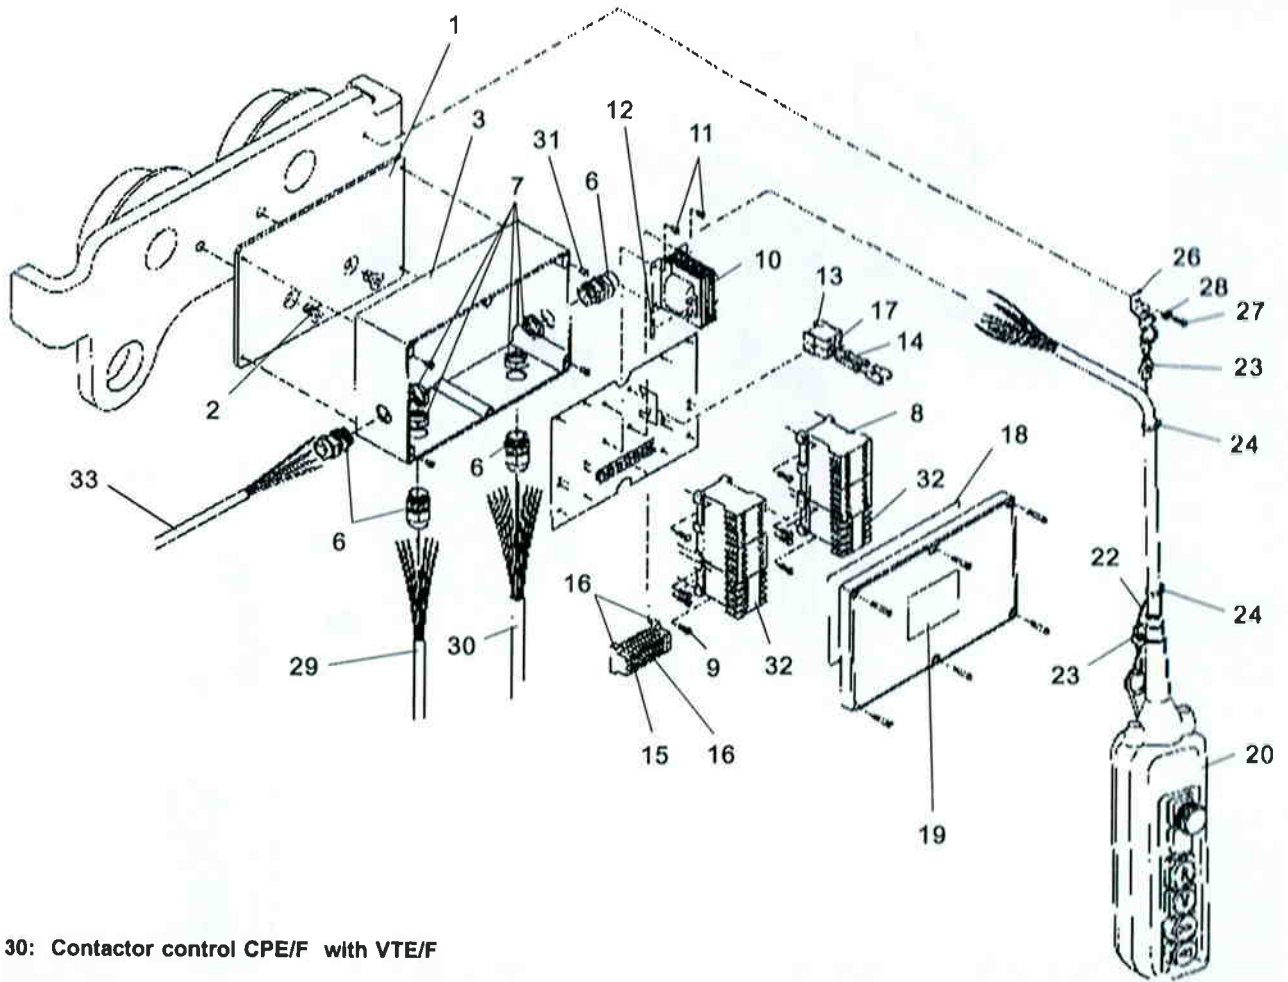


Fig. 30: Contactor control CPE/F with VTE/F

| Item No. | Description | Qty. | Yale Part No. all models | Item No. | Description | Qty. | Yale Part No. all models |
|----------|-----------------|------|--------------------------|----------|------------------------------|------|--------------------------|
| 1 | Plate | 1 | 0719732 | | Name tag | 3 | 0609821 |
| 2 | Screw | 2 | 9103005 | | Name tag F5 | 1 | 0609822 |
| 3 | Housing | 1 | 0719722 | | Name tag F6 | 1 | 0609823 |
| 4 | Mounting plate | 1 | 0719721 | 18 | Wiring diagram CPE+VTE | 1 | 0609854 |
| 5 | Screw | 4 | 9108018 | | Wiring diagram CPEF+VTE | 1 | 0609856 |
| 6 | Screw fitting | 4 | 9184082 | | Wiring diagram CPE+VTEF | 1 | 0609855 |
| 7 | Counter-nut | 4 | 9184086 | | Wiring diagram CPEF+VTEF | 1 | 0609853 |
| 8 | Contactor | 2 | 0609558 | 19 | Identity plate | 1 | 0719680 |
| 9 | Screw | 8 | 9107005 | 20 | Control switch CPE+VTE | 1 | 0609812 |
| 10 | Transformer | 1 | 0719760 | | Control switch CPEF+VTE | 1 | 0609806 |
| 11 | Screw | 4 | 9107011 | | Control switch CPE+VTEF | 1 | 0609807 |
| 12 | Fine-wire fuse | 1 | 9190129 | | Control switch CPEF+VTEF | 1 | 0609813 |
| 13 | Fuse terminal | 2 | 0609808 | 21 | Control cable (for 3 m lift) | 1 | 0609899 |
| 14 | Fine-wire fuse | 2 | 9190130 | 22 | Strain relief cord (2,4 m) | 1 | 9093001 |
| 15 | Terminal | 8 | 0609811 | 23 | Rope clamp | 2 | 0605355 |
| 16 | Ground terminal | 2 | 0609812 | 24 | Tape (specify length) | | 9181113 |
| 17 | Name tag 1 | 1 | 0609813 | 25 | S-hook | 1 | 0717029 |
| | Name tag 2 | 1 | 0609814 | 26 | Support | 1 | 0719742 |
| | Name tag 3 | 1 | 0609815 | 27 | Cyl. screw | 1 | 9102026 |
| | Name tag 5 | 1 | 0609848 | 28 | Lockwasher | 1 | 9122031 |
| | Name tag 6 | 1 | 0609849 | 29 | Cable conductor trolley | 1 | 0609898 |
| | Name tag L1 | 1 | 0609817 | 30 | Cable conductor hoist | 1 | 0609897 |
| | Name tag L2 | 1 | 0609818 | 31 | Screw | 4 | 9107023 |
| | Name tag L3 | 1 | 0609819 | 32 | Contactor (2nd speed only) | 1/2* | 0609574 |
| | Name tag PE | 1 | 0609820 | 33 | Power supply cable | 1 | - |

* only CPEF + VTEF



Yale Electric Chain Hoist CPE

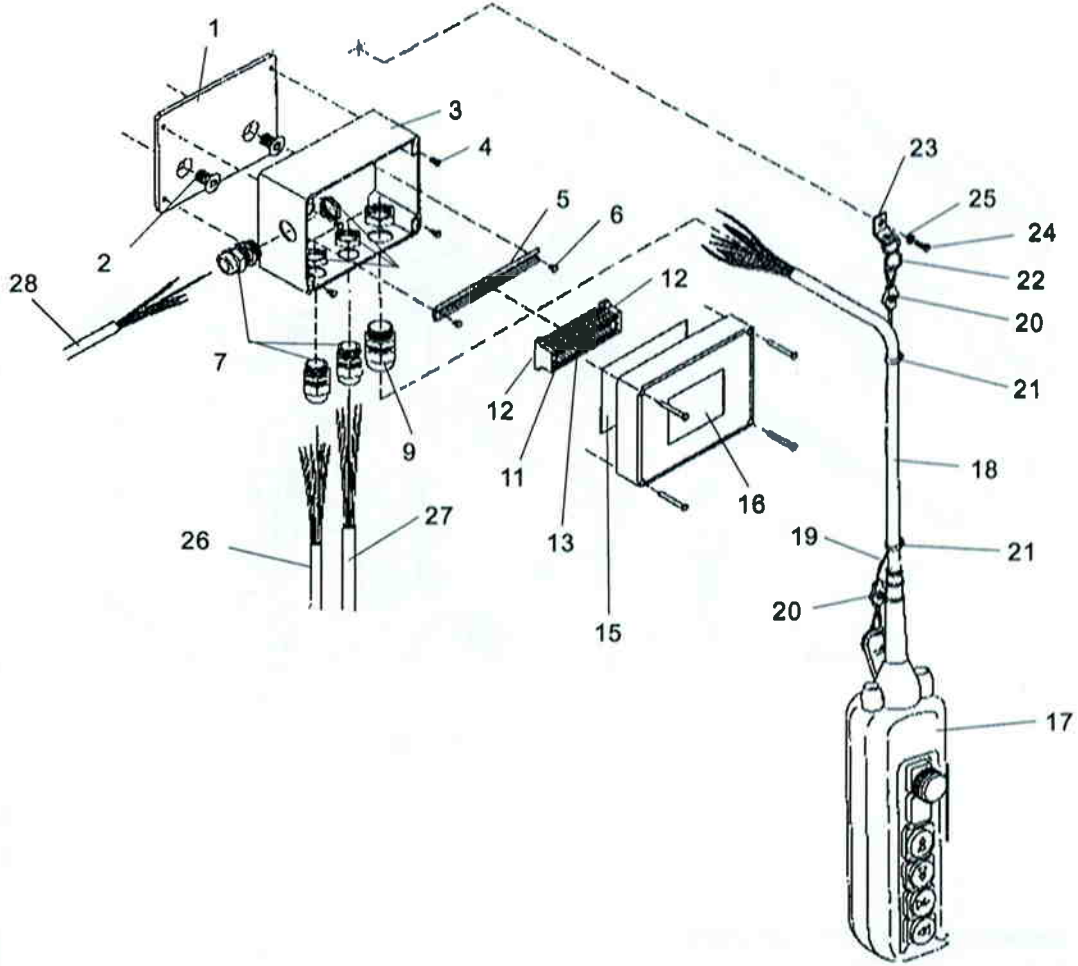


Fig. 31: Direct control CPE/F with VTE/F

| Item No. | Description | Qty. | Yale Part No. all models |
|----------|-----------------|------|--------------------------|
| 1 | Plate | 1 | 0719741 |
| 2 | Screw | 2 | 9103005 |
| 3 | Housing | 1 | 0609878 |
| 4 | Screw | 4 | 9107023 |
| 5 | Carrier | 1 | 0609877 |
| 6 | Screw | 2 | 9108018 |
| 7 | Screw fitting | 3 | 9184082 |
| 8 | Counter-nut | 3 | 9184086 |
| 9 | Screw fitting | 1 | 9184088 |
| 10 | Counter-nut | 1 | 9184087 |
| 11 | Terminal | 11 | 0609811 |
| 12 | Ground terminal | 2 | 0609812 |
| 13 | Name tag 1 | 1 | 0609813 |
| | Name tag 2 | 1 | 0609814 |
| | Name tag 3 | 1 | 0609815 |
| | Name tag 4 | 1 | 0609816 |
| | Name tag 5 | 1 | 0609848 |
| | Name tag 9 | 1 | 0609872 |
| | Name tag 10 | 1 | 0609873 |
| | Name tag 11 | 1 | 0609874 |
| | Name tag L1 | 1 | 0609817 |
| | Name tag L2 | 1 | 0609818 |
| | Name tag PE | 1 | 0609819 |
| | Name tag | 3 | 0609821 |

| Item No. | Description | Qty. | Yale Part No. all models |
|----------|-------------------------------------|------|--------------------------|
| 15 | Wiring diagram CPE + VTE | 1 | 0609882 |
| | Wiring diagram CPEF + VTE | 1 | 0609883 |
| | Wiring diagram CPE + VTEF | 1 | 0609884 |
| | Wiring diagram CPEF + VTEF | 1 | 0609885 |
| 15 | Name plate | 1 | 0719680 |
| 17 | Control switch CPE + VTE | 1 | 0609610 |
| | Control switch CPEF + VTE | 1 | 0609632 |
| | Control switch CPE + VTEF | 1 | 0609633 |
| | Control switch CPEF + VTEF | 1 | 0609611 |
| 18 | Control cable for 3 m lift | 1 | 0609890 |
| 19 | Strain relief cord (2,4 m) | 1 | 9093001 |
| 20 | Clamp | 2 | 0605355 |
| 21 | Tape (specify length) | | 9181113 |
| 22 | S-hook | 1 | 0717029 |
| 23 | Support | 1 | 0719742 |
| 24 | Cyl. screw | 1 | 9102026 |
| 25 | Lockwasher | 1 | 9122031 |
| 26 | Cable conductor hoist | 1 | 0609879 |
| 27 | Cable conductor trolley | 1 | 0609888 |
| 28 | Power supply cable | 1 | --- |
| | Control cable (m) CPE+VTE | 1 | 9062403 |
| | Control cable (m) CPEF+VTEF | 1 | 9062403 |
| | Strain relief cord (specify length) | | 9093001 |

Yale Electric Chain Hoist CPE





Yale Electric Chain Hoist CPE

Inspection Chart

Inspection before initial operation:

by:

Date of initial operation:

Regular Inspections

| Date | Findings | Repair | Test Date by * | |
|------|----------|--------|-------------------|--|
| | | | | |

* competent person
Ident.-No. 09900089 / 01.00




EC DECLARATION OF CONFORMITY

in accordance with Machinery Directive 89/392/EEC. Appendix II A.

We,

Yale Industrial Products GmbH
D- 42549 Velbert, Am Lindenkamp 31

hereby declare that the design, construction and commercialized execution of the below mentioned machine complies with the essential health and safety requirements of the EC Machinery Directive. The validity of this declaration will cease in case of any modification or supplement not being agreed with us previously. Furthermore, validity of this declaration will cease in case that the machine will not be operated correctly and in accordance with the operating instructions and/or not be inspected regularly.

| | |
|--|--|
| Machine description: | Electric chain hoist CPE/F Mod. CPE/F 16-8, Mod. CPE/F 20-8, Mod. CPE/F 25-5, Mod. CPE/F 30-5, Mod. CPE/F 32-4, Mod. CPE/F 40-4, Mod. CPE/F 50-2 Capacity 1600 - 5000 kg |
| Machine type: | Electric chain hoist |
| Serial number: | from manufacturing year 01/95 (Serial numbers for the individual capacities / models are registered in the production book with the remark CE-sign) |
| Relevant EC Directives: | EC Machinery Directive 98/37/EEC |
| Transposed harmonised standards, in particular: | EN 292, part 1 (safety of machines) EN 292, part 2 (safety of machines) EN 394 (safety of machines) EN 818, part 1 (round link chains) prEN 818, part 4 (round link chains) |
| Transposed (either complete or in extracts) national standards and technical specifications, in particular: | FEM 9.671; DIN 5684 (Lastketten) FEM 9.681 (Fahrmotoren) FEM 9.682 (Hubmotoren) FEM 9.755 (Betriebsdauer) FEM 9.511 (Triebwerkseinstufung) DIN 15018 (Krane) DIN 15400 (Lasthaken für Hebezeuge) DIN 15404 (Lasthaken für Hebezeuge) VDE 0100 / Teil 726; VDE 0113 / EN 60204 VBG 8 (Winden, Hub- und Zugeräte) VBG 9 (Krane) VBG 9.a (Lastaufnahmemittel) ZH 1/27 (Prüfung von Kranen) ZH1/25 (Prüfung von Hubgeräten) |
| Quality assurance: | DIN/ISO 9001 resp. DIN/EN 29001, module H acc. to EC Directive 90/683 EEC |
| Date / Manufacturer's authorized signature: | 13.07.1999  |
| Identification of the signee: | Manager Quality Control |

**Quality engineered
and performance tested -
recognisably Yale**

