



HYDRAULIC HAND PUMP “W07607” “X07707”

LARZEP S.A.
Avda. Urtiaga, 6. 48269 MALLABIA (Vizcaya).Spain
P.O.Box,27. 20600 Eibar (Guipúzcoa). Spain
Tel. (+34) 943-171200 - Fax. (+34) 943-174166
e-MAIL: comercial@larzep.com
www.larzep.com

LARZEP HYDRAULIC (UK) LTD
UNIT 1A PARK ROAD INDUSTRIAL ESTATE
CONSETT CO.DURHAM DH85PU. ENGLAND
Tel. (+44)- 1207-582266 - Fax. (+44)- 1207-583366
e-MAIL: enquire@larzep.co.uk
www.larzep.co.uk

INDEX

1. BEFORE USING THE EQUIPMENT AND SECURITY ----- 2
2. WARRANTY ----- 2
3. TECHNICAL FEATURES ----- 3
4. START UP ----- 3-4
5. MAINTENANCE ----- 4
6. DECLARATION OF CONFORMITY ----- 5

ANNEX

❖ GENERAL DRAWING

1. BEFORE USING THE EQUIPMENT AND SECURITY.



The correct union of a pump to a cylinder via a hydraulic hose constitutes a machine designed for lifting, pulling, folding and retaining operations, etc., that, due to its high thrust capacity, requires safe use in order to eliminate the risk of accidents.

- ❖ Read the instructions manual carefully and practise using the equipment before application.
- ❖ Use protective equipment such as safety goggles, boots and gloves.



Goggles



Boots



Gloves



Choose the most suitable model for the application from the wide range available, and make sure that it will not exceed 80% of its nominal capacity during normal operation.

- ❖ Define stable zones for applying the load and safety zones for operators, separating them through the use of hoses of sufficient length.
- ❖ Block loads mechanically once the movement has been completed and avoid operating underneath them.
- ❖ Use all the cylinder’s useful support surface, both on the head and the base. Be prepared to use tilting heads if applying lateral loads.



Do not expose the equipment to intense heat sources (welding).

- ❖ Remove loads before carrying out maintenance operations and always work in clean, well-lit areas.
- ❖ Include control elements (pressure gauges) in the installation in order to enable the operator to monitor the pressure in the system and ensure that the equipment’s nominal capacity is never exceeded. Be prepared to use safety valves and accessories if the safety criteria so demand.
- ❖ The pump controls should be activated manually, as should the connections between elements equipped with quick plugs.
- ❖ Once you have finished using the device, check that it has not been damaged, clean it and protect it ready for storage.
- ❖ Clean the quick plugs before connecting and make sure the connections are perfect (first insert as far as the plug will go and then screw in by hand). A bad connection may result in improper functioning and may even generate a safety hazard.
- ❖ Install the device in such a way as to ensure that the hoses are not subjected to sharp or forced bends or thrust actions that may cause them to break.
- ❖ Do not modify the device (welded parts, lengthening drive levers, etc.) without consulting the manufacturer.
- ❖ Do not use the hoses for transporting the device. Use the handles on the cylinders (when appropriate) and set the pump lever to the transportation position.
- ❖ When filling the pump with oil, always use LARZEP hydraulic oil or another oil of similar characteristics. Fill only to the indicated level and remember that the cylinder piston should be back.
- ❖ Before initiating operation, check that the installation is correct, the operator position is safe and the working zone is out of bounds to all personnel.
- ❖ In all cases, the operator should have received adequate training regarding the handling of the device and logical safety criteria associated with the movement of heavy loads.

2. WARRANTY.

LARZEP, S.A. guarantees its products against all design and manufacturing defects for the durations of two years from the date of purchase. This guarantee does not include the ordinary wear of both metal and non-metal parts, abuse, using the equipment beyond its rated capacity and any wear or damage incurred as a result of using a hydraulic fluid which is not recommended by LARZEP, S.A.

Please note that if the equipment is disassembled or serviced by anyone other than an authorized service dealer or by LARZEP, S.A., this guarantee is rendered null and void.

In the event of a warranty claim, return the equipment, to LARZEP, S.A. or the authorized dealer which sold you the hydraulic equipment, LARZEP, S.A. will repair or replace the faulty equipment, whichever is deemed most appropriate. LARZEP, S.A. shall not be held liable for any consequential damages or losses, which may occur as a result of faulty equipment

3. TECHNICAL FEATURES.

The "W" Hand Pumps are compact, light and portable used to power single acting-cylinders, they operate horizontally or vertically, with pump head downwards. All models with pressure relief valve.

The two speeds pumps are recommended for applications where the cylinder plunger must move rapidly, also for larger cylinder hook-ups where greater oil capacity is required.

All pumps have 3/8"-18 NPT female ports.

The "X" models, are automatic two-speed pumps with a 4-way control valve for operation of double acting- cylinders. Internal pressure relief valves for overload protection.


Two-speed operation for high tonnage cylinders where oil capacity and fast economical cycle time is needed.

REFERENCE	SPEEDS	USABLE OIL	OIL DISPLACEMENT PER STROKE		PRESSURE RATING		WEIGHT
			1° STAGE/ 2° STAGE	1° STAGE/ 2° STAGE	1° STAGE/ 2° STAGE	1° STAGE/ 2° STAGE	
W07607	2	7500 CC	70,5 / 2,6		20 / 700		30 Kg
X07707	2	7500 CC	70,5 / 2,6		20 / 700		32 Kg

4. START UP.

INSTALACION – INSTALATION

SIMPLE EFECTO – SINGLE ACTING

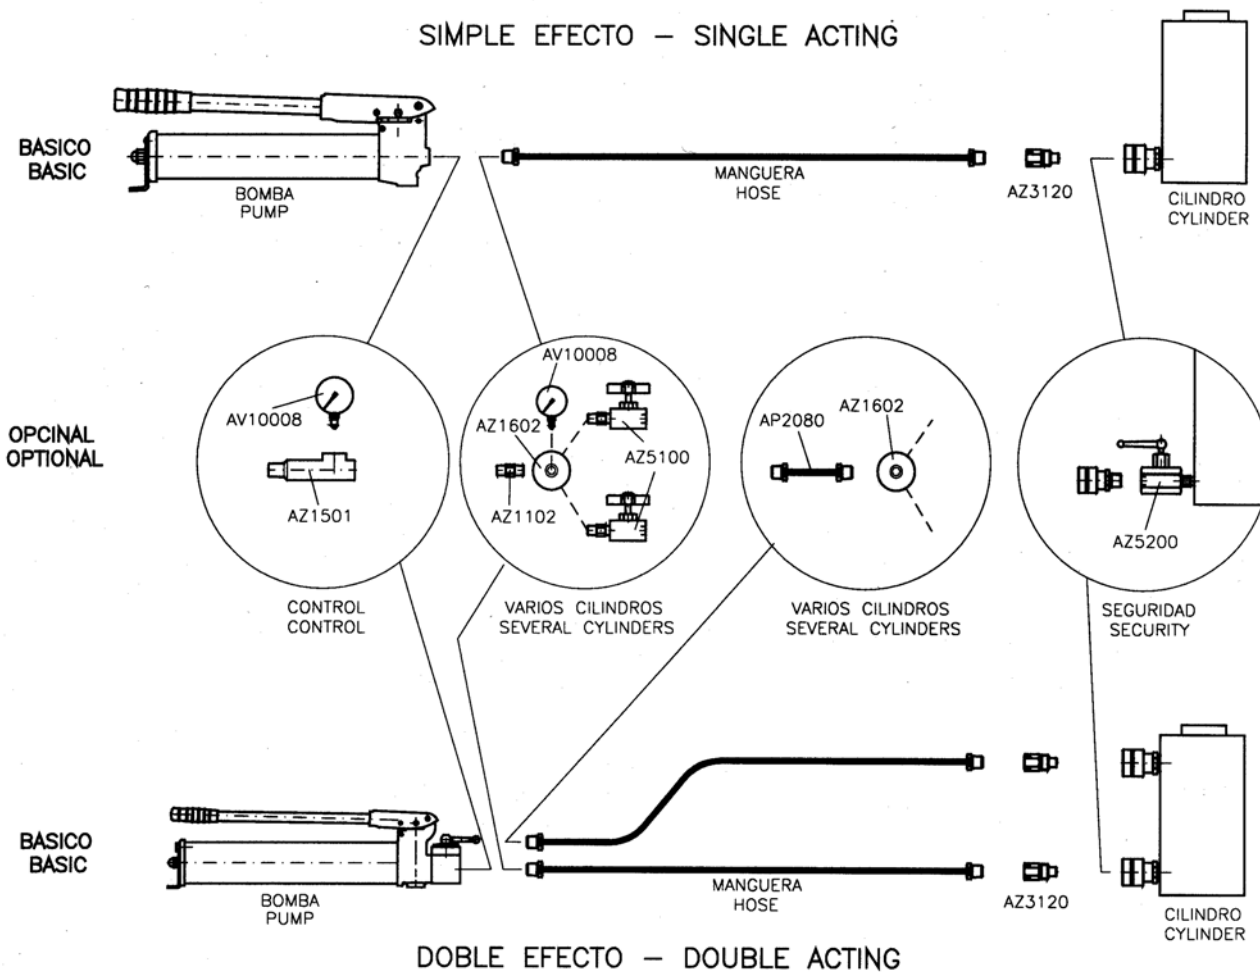

Unpack and visually check all the components, making sure that there are no oil leaks, loose or damaged plugs, damaged threads, etc. Never use components that are damaged or appear to be in poor condition.

Assemble the device in accordance with the instructions given in the diagram, first checking that you have all the necessary material.

Check the correct installation and perfect functioning of the device with a load, in accordance with the procedure outlined below:

SINGLE ACTION INSTALLATION

1. Release the pump drive lever by removing the hook from the lever-holder housing.
2. Pump manually with the drive screw open (rotate a few times to loosen) in order to fill the pump's internal circuit with oil.
3. Close the drive screw by turning clockwise manually. You do not need to close too tightly.
4. Now pump using the drive lever. First, fill the hose with oil. The number of thrusts required will depend on the length of the hose and the flow supplied by the pump piston. With two-speed pumps, the large piston will be activated during the load-free feed movement, and when the device comes into contact with the load, an internal large piston relief valve will be automatically triggered and only the oil supplied by the small piston will be available up to 700 kg/cm², which is the maximum pressure for the device.
5. Once the hose is full of oil, the cylinder piston will start to advance.
6. If the cylinder has a mechanical limit switch capable of withstanding the maximum device pressure, continue pumping until the limit switch is reached.
7. If any control elements (pressure gauges) are available, you will be able to see how the pressure increases along with the effort required to move the lever.
8. Keep pumping until you obtain the maximum pressure (700 kg/cm²). In this way you will be able to check the correct functioning of the internal safety valve and the absence of oil leaks in the installation.
9. Maintain pressure in the installation for a short period of time (1 minute) without pumping, in order to check the correct functioning of the pump's check valve.
10. Gently open the pump's drive screw (by turning anticlockwise) in order to protect the fall of the pressure gauge needle. Do not force the drive screw open. The cylinder will not move back more quickly because the screw is looser. A couple of turns will be sufficient.
11. If the cylinder has a return spring (SM, SMP, SMX, SH, TE, T, SMA, SHA, CY, KC) the piston will move back automatically. The return speed may be slow in some applications. In this case, we recommend the use of double effect cylinders. In the case of load return cylinders (SP, SX, SL, SS, ST, STX), you will need to push the piston back using more or less force, depending on the size and position of the cylinder.
12. In cylinders without a mechanical limit switch (SS, ST, STX) this type of test cannot be carried out. If you do not have a test bench, you will have to test the installation using the actual load in the application. This operation should be carried out with extreme care by experienced personnel and maximum safety measures should be applied.
13. Repeat the process as many times as necessary until you are comfortable handling the device.
14. If using close or check valves, or working with various cylinders via flow distributors, remember to take into consideration the effect these accessories may have on the functioning of the device, and establish an operating procedure in order to avoid unwanted effects.

DOUBLE ACTION INSTALLATION

1. The connection of the quick plugs is, if possible, even more important here, since a bad connection will not only prevent the device from functioning, it may also generate excessive pressure build-up that may cause the cylinder to break. Take note of which hose connects to the thrust chamber and which to the return chamber.
2. All double action LARZEP cylinders are equipped with a mechanical limit switch capable of withstanding the nominal pressure. You can therefore carry out the test described in the previous section. If you are working with another type of cylinder and are not 100% sure, do not carry out this test.
3. Release the pump drive lever by removing the hook from the lever-holder housing.
4. Turn the control of the distributing valve to the central position and pump a few times to fill the internal channels with oil.
5. Turn the lever to one side and pump. Oil will flow through the hose connected to the side to which the valve lever is rotated. If this hose is connected to the cylinder's thrust chamber, the piston will move forward. The oil in the return chamber will flow freely through the other hose to the pump tank. Until the moment the cylinder connects with the load, flow is supplied by both the large and small pistons.
6. Continue pumping until you reach the limit switch. At this moment an internal large piston relief valve will be triggered, and only the oil supplied by the small piston will be available. Subject the installation to pressure to check for leaks.
7. Stop pumping and check (preferably using a pressure gauge) that the installation maintains the pressure level.
8. Turn the valve lever to the other side and pump. Oil will flow to the return chamber and the piston will move back. The oil in the thrust chamber will flow freely back to the tank.
9. Repeat the process as many times as necessary until you are comfortable handling the device.
10. If using close or check valves, or working with various cylinders via flow distributors, remember to take into consideration the effect these accessories may have on the functioning of the device, and establish an operating procedure in order to avoid unwanted effects.

5. MAINTENANCE.**Oil level check.**

- ❖ With the pump in vertical position (base (1) downwards), unscrew or pry off the plug (16). Check the level on the dip stick.
- ❖ This check must be carried out with the cylinder fully retracted. Excessive amount of oil in the tank will lead to internal pressures which will hamper the function of the pump.
- ❖ Filter the oil before filling up the pump.
- ❖ Once the equipment is being used the areas exposed to wear and oxidation must be cleaned and greased.

BREAK DOWNS AND REPARATIONS**THE CYLINDER DOESN'T REACH WORKING PRESSURE.**

- ❖ Relief valve decalibrated (12) ____ *Calibrate the valve.*
- ❖ Retention ball valve failure (20) ____ *Clean the seat and replace the ball.*
- ❖ Closing ball valve failure (22) ____ *Clean the seat and replace the ball.*
- ❖ Pressure seal damaged (26) ____ *Replace the seal.*
- ❖ Cylinder pressure seal damaged (see cylinder) ____ *Replace the seal.*

THE CYLINDER DOESN'T RETRACT

- ❖ Too much oil in the tank ____ *Check the level.*

THE CYLINDER DOESN'T AVANCE

- ❖ Lack of oil in the tank ____ *Check the oil.*
- ❖ Couplers not fully inserted ____ *Check couplers.*
- ❖ Admission ball valve failure (19) ____ *Clean the seat and replace the ball.*
- ❖ Closing ball valve failure (22) ____ *Clean the seat and replace the ball.*

6. DECLARATION OF CONFORMITY.**DECLARACION DE CONFORMIDAD**

LARZEP, S.A.
Dirección: Avda. Urtiaga, 6
48269 Mallabia ESPAÑA

E

Declaramos bajo nuestra exclusiva responsabilidad la conformidad de los productos a los que refiere esta declaración, con las disposiciones de la directiva:
89/392/CEE, 91/368/CEE, 93/44/CEE, 93/68/CEE, 98/37/CEE

DECLARATION DE CONFORMITE

Nous, LARZEP, S.A.
Adresse: Avda. Urtiaga, 6
48269 Mallabia SPAIN

F

Déclarons sous notre seule responsabilité que les produits auxquels se réfère cette déclaration sont conformes aux dispositions des Directives:
89/392/EEC, 91/368/EEC, 93/44/EEC, 93/68/EEC, 98/37/EEC

DECLARAÇÃO DE CONFORMIDADE

Nós, LARZEP, S.A.
Endereço: Avda. Urtiaga, 6
48269 Mallabia SPAIN

P

Declaramos, sob nossa única responsabilidade, que os seguintes produtos, incluídos nesta declaração estão em conformidade com o disposto na Directiva:
89/392/EEC, 91/368/EEC, 93/44/EEC, 93/68/EEC, 98/37/EEC

ÖVERENSSTEMMELSEERKLÄRING

Vi, LARZEP, S.A.
Adresse: Avda. Urtiaga, 6
48269 Mallabia SPAIN

DK

Erklærer på eget ansvar, at følgende produkter som er omfattet af denne erklæring, er i overensstemmelse med bestemmelserne i Direktiv:
89/392/EEC, 91/368/EEC, 93/44/EEC, 93/68/EEC, 98/37/EEC

ERKLÄRINGOM ÖVERENSSTEMMELSE

Vi, LARZEP, S.A.
Adresse: Avda. Urtiaga, 6
48269 Mallabia SPAIN

N

Erklærer på eget ansvar, at følgende produkter som dekkes av denne erklæringen, er i overensstemmelse med bestemmelserne i Direktiv:
89/392/EEC, 91/368/EEC, 93/44/EEC, 93/68/EEC, 98/37/EEC

ÜBEREINSTIMMUNGSERKLÄRUNG

Wir, LARZEP, S.A.
Anschriřt: Avda. Urtiaga, 6
48269 Mallabia SPAIN

D

Erklären auf eigene Verantwortung, daß folgende Produkte, auf die sich diese Erklärung bezieht, mit den Bedingungen der Direktiven 89/392/EEC, 91/368/EEC, 93/44/EEC, 93/68/EEC, 98/37/EEC übereinstimmen.

Tipo, Type, Typ, Tyyppi.

SM / SX / SP / SMX / SMP / SH / DH / D / SL / STX / TE / T / SMA / SHA / SS / DD / ST / KC / CT / C / CY / W / X / WA / XA / WH / WI / Z / YA / YG / YZ / A / AB / AC / AF / BL / B / F / HN / EC / EE / EG / EM / EZ / CC / CN / CK / CD / VA / VB / VC / VZ / CA / CS / DL / DP / DLG / AA / AU

Mallabia, ESPAÑA 2000 / 01 / 01

Lugar y fecha, place and date, lieu et date, plats och datum, paikka ja päivämäärä, udstedelsessted og-dato, ort und datum, plaats en datum, local e data, luogo e data.

DECLARATION OF CONFORMITY

We, LARZEP, S.A.
Address: Avda. Urtiaga, 6
48269 Mallabia SPAIN

GB

Declare under our sole responsibility that the following products to which this declaration relates conform with the provisions of Directives:
89/392/EEC, 91/368/EEC, 93/44/EEC, 93/68/EEC, 98/37/EEC

DICHIARAZIONE DI CONFORMITÀ

Noi, LARZEP, S.A.
Indirizzo: Avda. Urtiaga, 6
48269 Mallabia SPAIN

I

Dichiariamo sotto la nostra esclusiva responsabilità che i prodotti ai quali questa dichiarazione si riferisce sono conformi quanto previsto dalle Direttive:
89/392/EEC, 91/368/EEC, 93/44/EEC, 93/68/EEC, 98/37/EEC

VAATIMUSTEMUKAISUUSVAKUUTUS.

Me, LARZEP, S.A.
Osoite: Avda. Urtiaga, 6
48269 Mallabia SPAIN

FIN

Vakuutamme yksinomaan omalla vastuullamme, että seuraavat tuotteet, joihin tämä vakuutus liittyy, ovat seuraavien Direktiivien vaatimusten mukaisia:
89/392/EEC, 91/368/EEC, 93/44/EEC, 93/68/EEC, 98/37/EEC

VERKLARINGVAN OVEREENKOMST.

Wij, LARZEP, S.A.
Adres: Avda. Urtiaga, 6
48269 Mallabia SPAIN

NL

Verklaren geheel onder eigen verantwoordelijkheid dat de volgende producten, waarop deze verklaring heeft in overeenstemming zijn met de bepalingen van Richtlijn:
89/392/EEC, 91/368/EEC, 93/44/EEC, 93/68/EEC, 98/37/EEC

FÖRSÄKRAN OM ÖVERESSTÄMMELSE

Vi, LARZEP, S.A.
Adress: Avda. Urtiaga, 6
48269 Mallabia SPAIN


S

Försäkrar under eget ansvar att följande produkter som omfattas av denna försäkran är i överensstämmelse med villkoren i Direktiv:
89/392/EEC, 91/368/EEC, 93/44/EEC, 93/68/EEC, 98/37/EEC

LARZEP, S.A.

Nombre y firma, name and signature, nom et signature, namn och underskrift, nimi ja nimikirjoitus, navn og underskrift, name und underskrift, naam en handtekening, nome e assinatura, nome e firma.

GENERAL DRAWING (W07607)

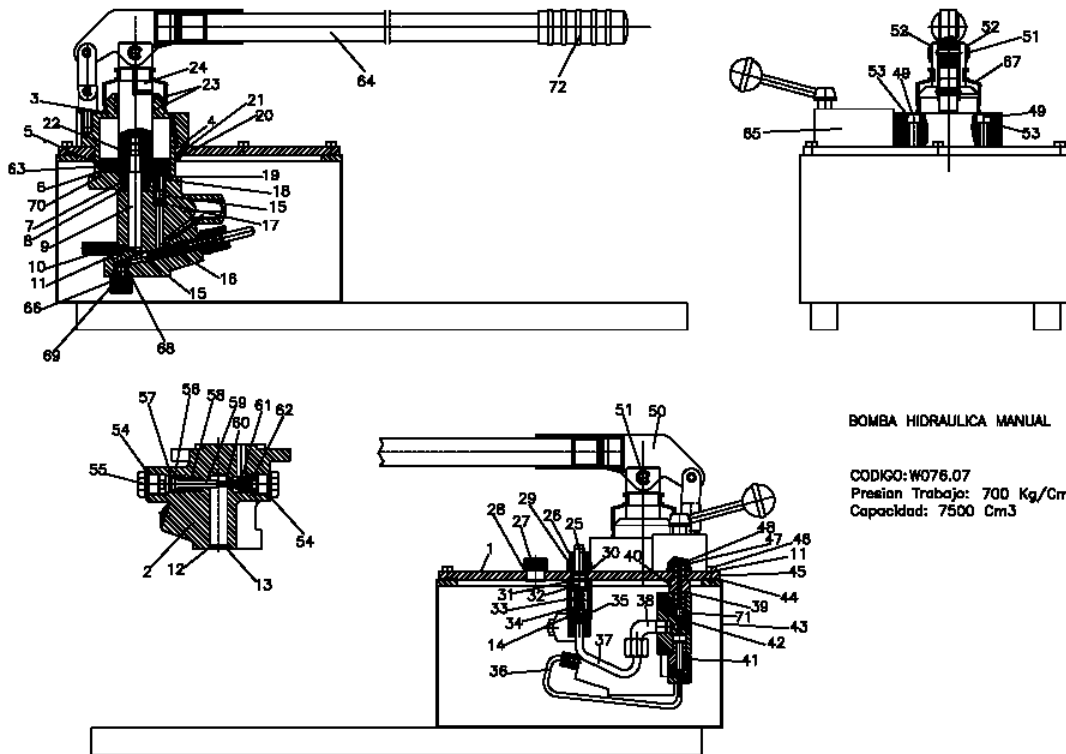

BOMBA HIDRAULICA MANUAL

CODIGO: W076.07
 Presion Trabajo: 700 Kg/Cm2
 Capacidad: 7500 Ccm3


N	DENOMINACION	CODIGO	N Piezas
1	ETIQUETA ADHESIVA	30A0023	1
2	CUERPO	52S0001	1
3	CUERPO DE PISTONES	52W0019	1
4	JUNTA DE BASE	12G0001	1
5	TORICA GUIA #52.39x3.53	12A0009	1
6	PISTON GRANDE	54C0002	1
7	TUERCA	55S0001	1
8	COLLARIN	12B0017	1
9	PISTON PEQUEÑO	54A0021	1
10	VALVULA	17C0005	1
11	ARANDELA	57B0001	12
12	ANILLO ELASTICO	14D0002	1
13	RED	29A0001	1
14	ESFERA #6	31A0001	2
15	ESFERA #8.5	31A0005	2
16	MUELLE	13C0002	1
17	MUELLE	13D0005	1
18	ARANDELA	57B0002	1
19	TORNILLO RETENCION	1500005	1
20	TUERCA M8	14B0006	4
21	ARANDELA DENTADA M8	14C0001	5
22	TORNILLO M4x5	14F0004	2
23	TORICA AN23	12A0058	2
24	SOPORTE DE PISTONES	24K0045	1

25	TORNILLO REGULADOR	1500006	1
26	TUERCA M10x1	14B0022	1
27	TAPON	15L0004	1
28	TORICA AN11	12A0049	1
29	GUIA	55S0002	1
30	ARANDELA COBRE	57B0022	1
31	TORICA AN6	12A0022	1
32	PULSADOR	15N0004	1
33	MUELLE	13D0002	1
34	ASIENTO DE ESFERA	15N0003	1
35	CUERPO DE VALVULA	52Y0004	1
36	TUBO DE PRESION	51D0001	1
37	TUBO DE VALVULA	51D0002	1
38	RACOR EN L	15J0001	1
39	ARANDELA	57B0003	2
40	CONECTOR	15J0002	1
41	RACORD	15J0003	2
42	DISTRIBUIDOR	17B0001	1
43	DEPOSITO	25F0001	1
44	JUNTA DEPOSITO	12F0001	1
45	CONJ.TAPA DE DEPOSITO	25F0024	1

N	DENOMINACION	CODIGO	N Piezas
46	TORNILLO M6x20	14A0017	11
47	SEGMENTO	57A0034	1
48	TORICA AN5	12A0059	1
49	TORNILLO ALLEN M8x60	14A0081	4
50	CONJUNTO INYECTOR	24J0024	1
51	EJE	15I0074	1
52	ARANDELA SEGURIDAD	14D0001	2
53	ARANDELA COBRE	57B0005	4
54	ARANDELA	57B0004	2
55	TAPON	15L0005	2
56	SEGMENTO	57A0035	1
57	TORICA AN9	12A0048	1

58	MUELLE	13A0018	1
59	CORREDERA	15G0001	1
60	MUELLE	13A0019	1
61	OBTURADOR	15F0002	1
62	MUELLE	13A0020	1
63	SEGMENTO	12D0001	1
64	PALANCA	24A0008	1
65	VALVULA	96A0001	1
66	CUERPO DE VALVULA	52Y0029	1
67	FUELLE PROTECTOR PISTON	12L0012	1
68	ARANDELA COBRE	57B0019	1
69	MALLA FILTRO	29A0018	1
70	JUNTA BASE	12C0008	1
71	ESFERA #7	31A0006	1
72	EMPUÑADURA	24C0016	1

GENERAL DRAWING (X07707)

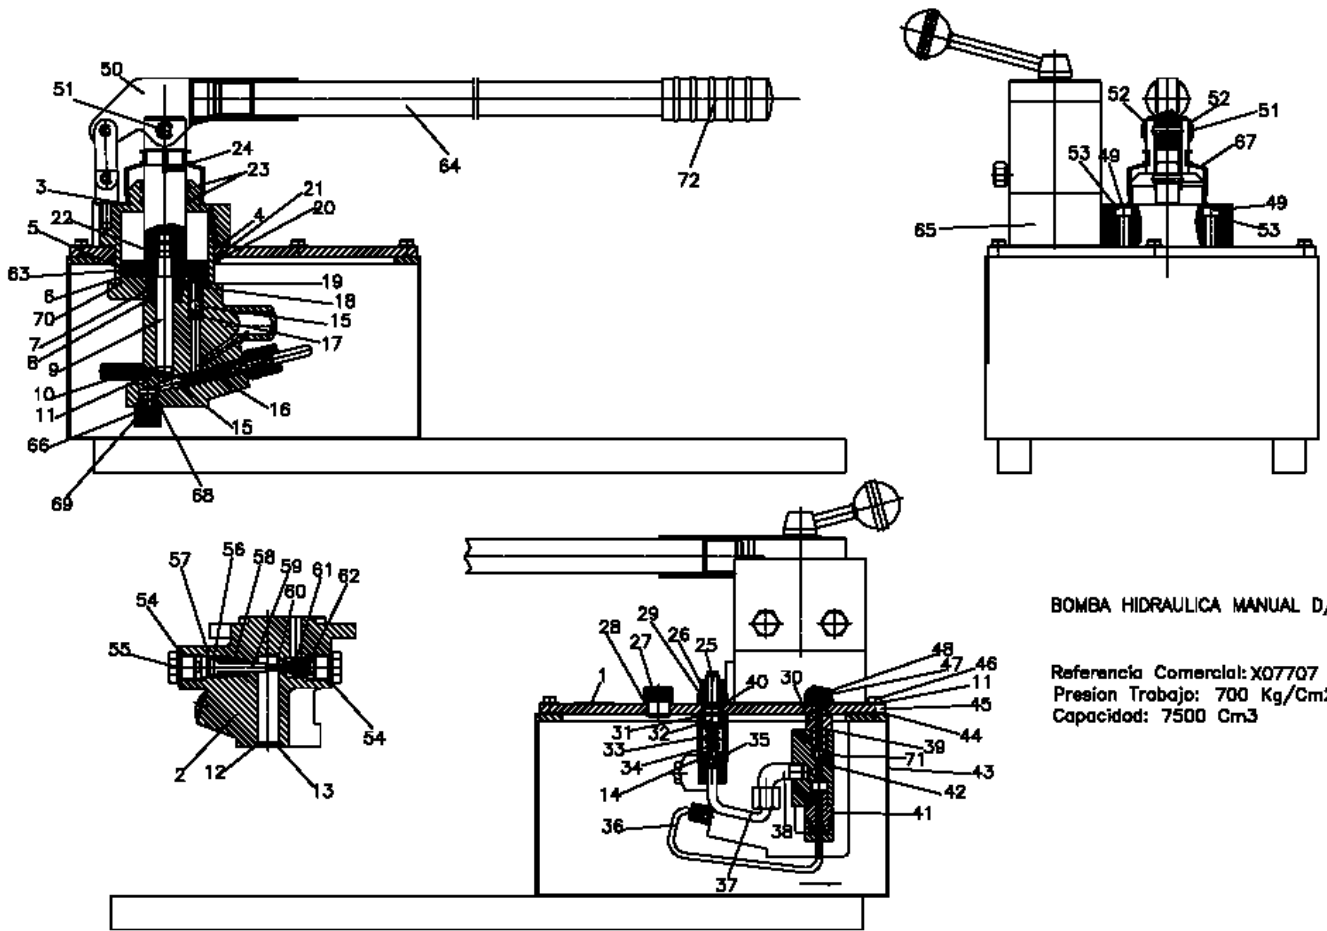

BOMBA HIDRAULICA MANUAL D/E

Referencia Comercial: X07707
 Presion Trabajo: 700 Kg/Cm²
 Capacidad: 7500 Cm³

N	DENOMINACION	CODIGO	N Piezas				
1	ETIQUETA ADHESIVA	30A0023	1	23	TORICA AN23	12A0058	2
2	CUERPO	52S0001	1	24	SOPORTE DE PISTONES	24K0045	1
3	CUERPO DE PISTONES	52W0019	1	25	TORNILLO REGULADOR	1500006	1
4	JUNTA DE BASE	12G0001	1	26	TUERCA M10x1	14B0007	1
5	TORICA GUIA ø52.39x3.53	12A0009	1	27	TAPON	15L0004	1
6	PISTON GRANDE	54C0002	1	28	TORICA AN11	12A0049	1
7	TUERCA	55S0001	1	29	GUIA	55S0002	1
8	COLLARIN	12B0017	1	30	ARANDELA COBRE	57B0022	1
9	PISTON PEQUEÑO	54A0005	1	31	TORICA AN6	12A0022	1
10	VALVULA	17C0005	1	32	PULSADOR	15N0004	1
11	ARANDELA	57B0001	12	33	MUELLE	13D0002	1
12	ANILLO ELASTICO	14D0002	1	34	ASIENTO DE ESFERA	15N0003	1
13	RED	29A0001	1	35	CUERPO DE VALVULA	52Y0004	1
14	ESFERA ø6	31A0001	2	36	TUBO DE PRESION	51D0001	1
15	ESFERA ø8.5	31A0005	2	37	TUBO DE VALVULA	51D0002	1
16	MUELLE	13C0002	1	38	RACOR EN L	15J0001	1
17	MUELLE	13D0005	1	39	ARANDELA	57B0003	2
18	ARANDELA	57B0002	1	40	CONECTOR	15J0002	1
19	TORNILLO RETENCION	1500005	1	41	RACORD	15J0003	2
20	TUERCA M8	14B0006	4	42	DISTRIBUIDOR	17B0001	1
21	ARANDELA DENTADA M8	14C0001	5	43	DEPOSITO	25F0001	1
22	TORNILLO M4x5	14F0004	2	44	JUNTA DEPOSITO	12F0001	1
				45	CONJ.TAPA DE DEPOSITO	25F0024	1